




# Model 44D

## AUDIO INTERFACE

### Configuration Guide

This Configuration Guide is applicable for serial numbers  
M44D-01151 and later  
with application firmware 2.1 and later and  
Dante® firmware 2.0.0 (Ultimo 3.10.1.12) and later

Also applicable to units with serial numbers  
M44D-00151 to 00250

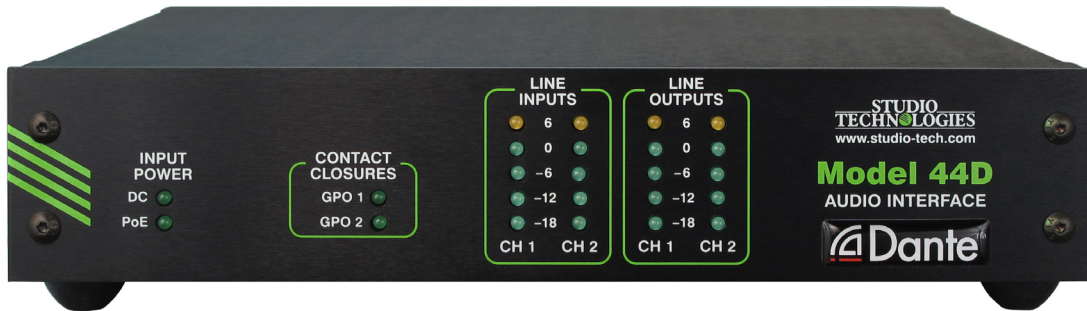

“Original” Model 44D back panel with serial numbers 00151-00250 (upper);  
“Updated” Model 44D back panel with serial numbers 01151-later (lower)

### SW1 – Line Input Nominal Level



+4 dBu (SMPTE, +4 dBu = -20 dBFS)



0 dBu (EBU, 0 dBu = -18 dBFS)

### SW2 – Line Output Nominal Level



+4 dBu (SMPTE, +4 dBu = -20 dBFS)



0 dBu (EBU, 0 dBu = -18 dBFS)

### SW3 – 10 kHz Low-Pass Filter



Disabled



Enabled

### SW4 – Operating Mode



Audio Interface



Tone Generator