



# Model 71 Control Console Configuration Guide

## Configuration

Hold the Config button on the back of the Model 71 for two seconds to enter the configuration mode. The Status LED will start to blink while in configuration mode. Use the Level control to set the device address. The current address is displayed using the Dim and Reference Level LEDs.

Address	Dim LED	Reference Level LED
1	OFF	OFF
2	OFF	ON
3	ON	OFF
4	ON	ON

The default address is 4. Press and hold the Config button to exit configuration mode.

## Power Up

After applying power to the Model 71 each LED will light momentarily. After the three LEDs have been lit, the device address will be shown briefly using the Dim and Reference Level LEDs as shown in the above table. When this is complete the Model 71 will enter the normal operating mode and the Status LED will light if communications are established with the Central Controller. If the Status LED does not light check to see if there is a device address conflict among all connected Control Consoles and that all cables are connected properly.

