



**Connection Details for:**

**Live-Link™ Camera End Unit**


**Order Codes: LL-3G-CA-075 and LL-3G-CA-076**

**and**


**Live-Link Control Room Unit**

**Order Codes: LL-3G-CR-075 and LL-3G-CR-076**

# Mic/Line Inputs 1-4 – Camera End Unit

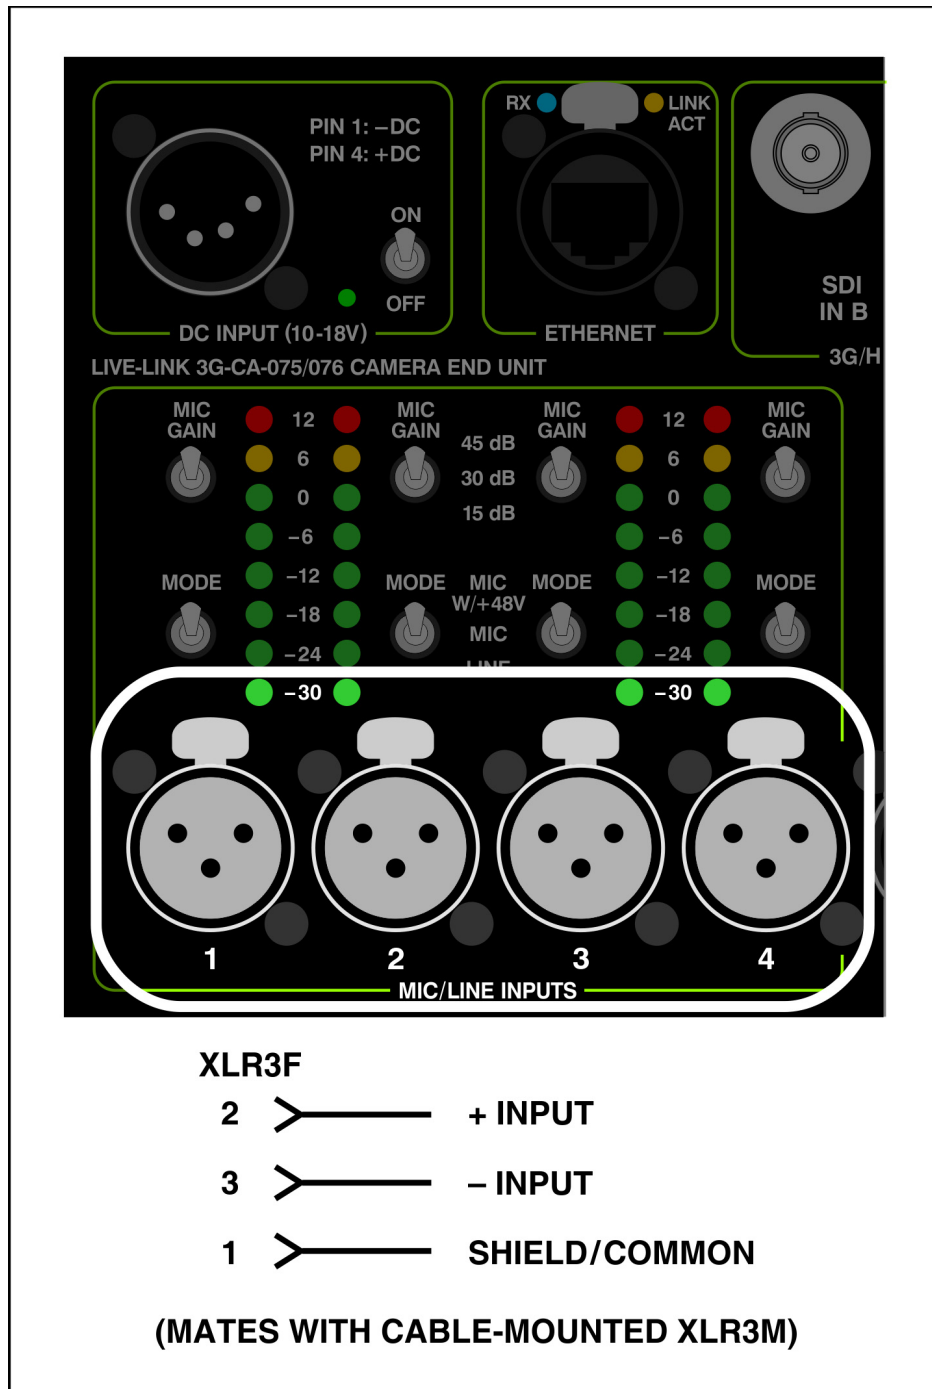

# Mic/Line Outputs 1-4 – Control Room Unit

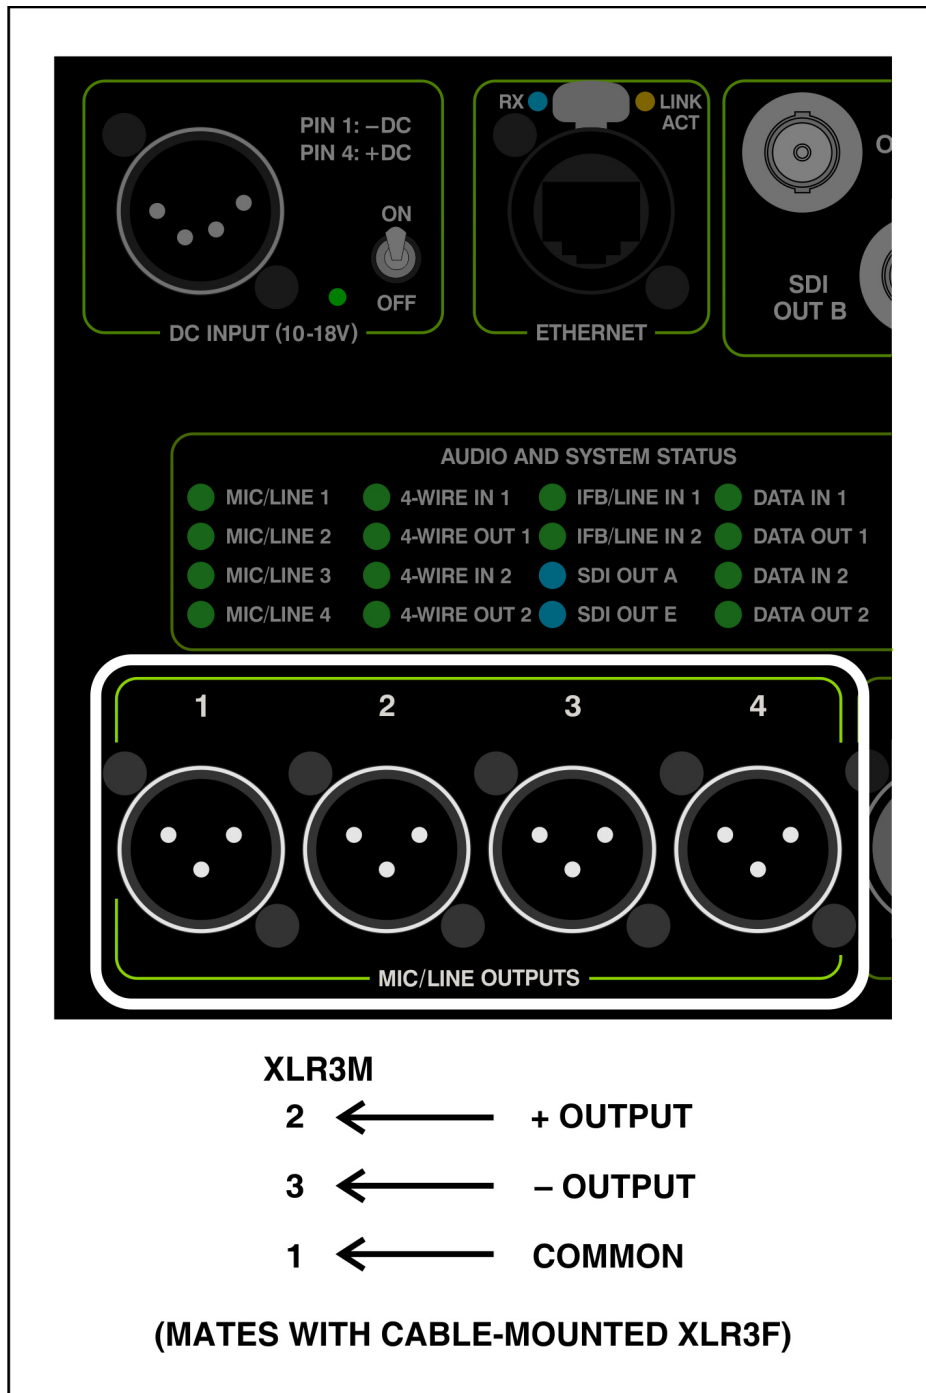


# Line Outputs 1-2 – Camera End Unit



# IFB Output – Camera End Unit




## Line/IFB Inputs 1-2 – Control Room Unit

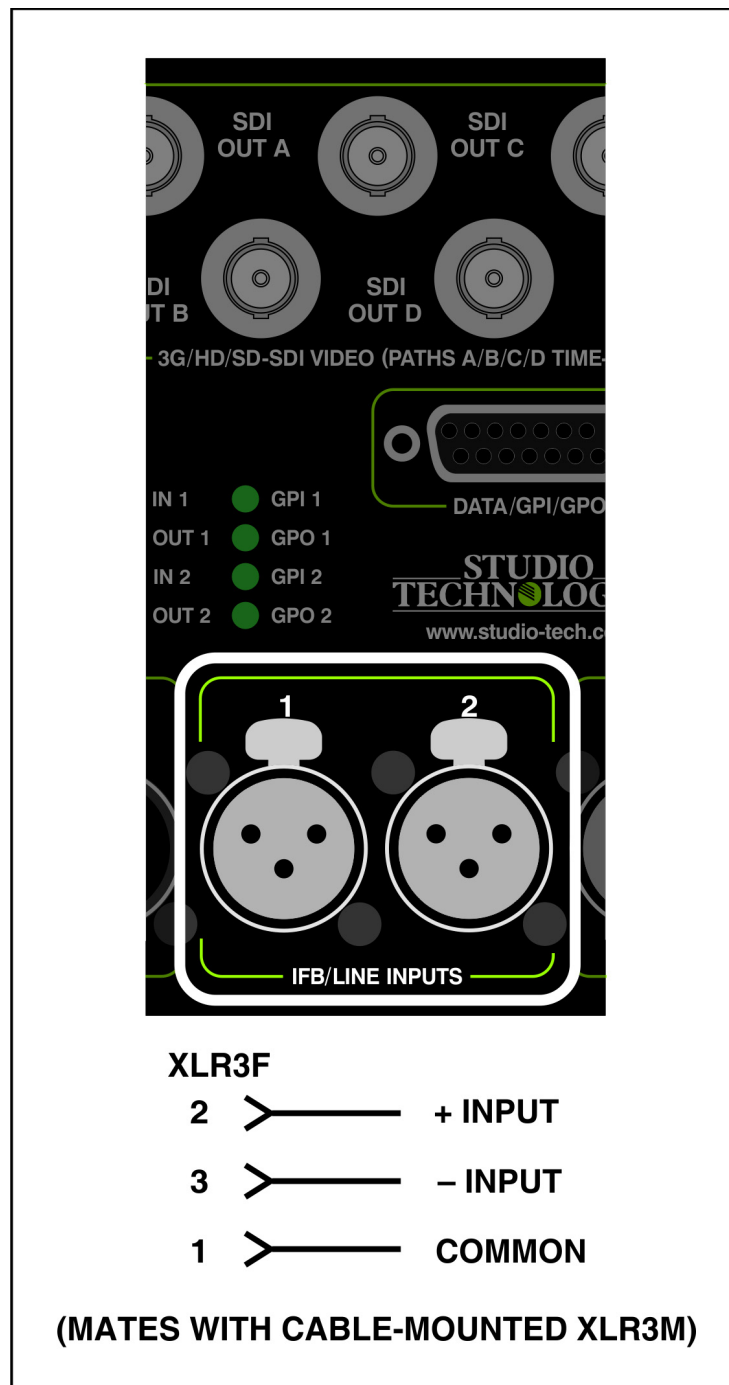

## 2-Wire Party-Line (PL) Intercom – Camera End Unit



## 4-Wire Intercom Input/Output 1-2 – Control Room Unit

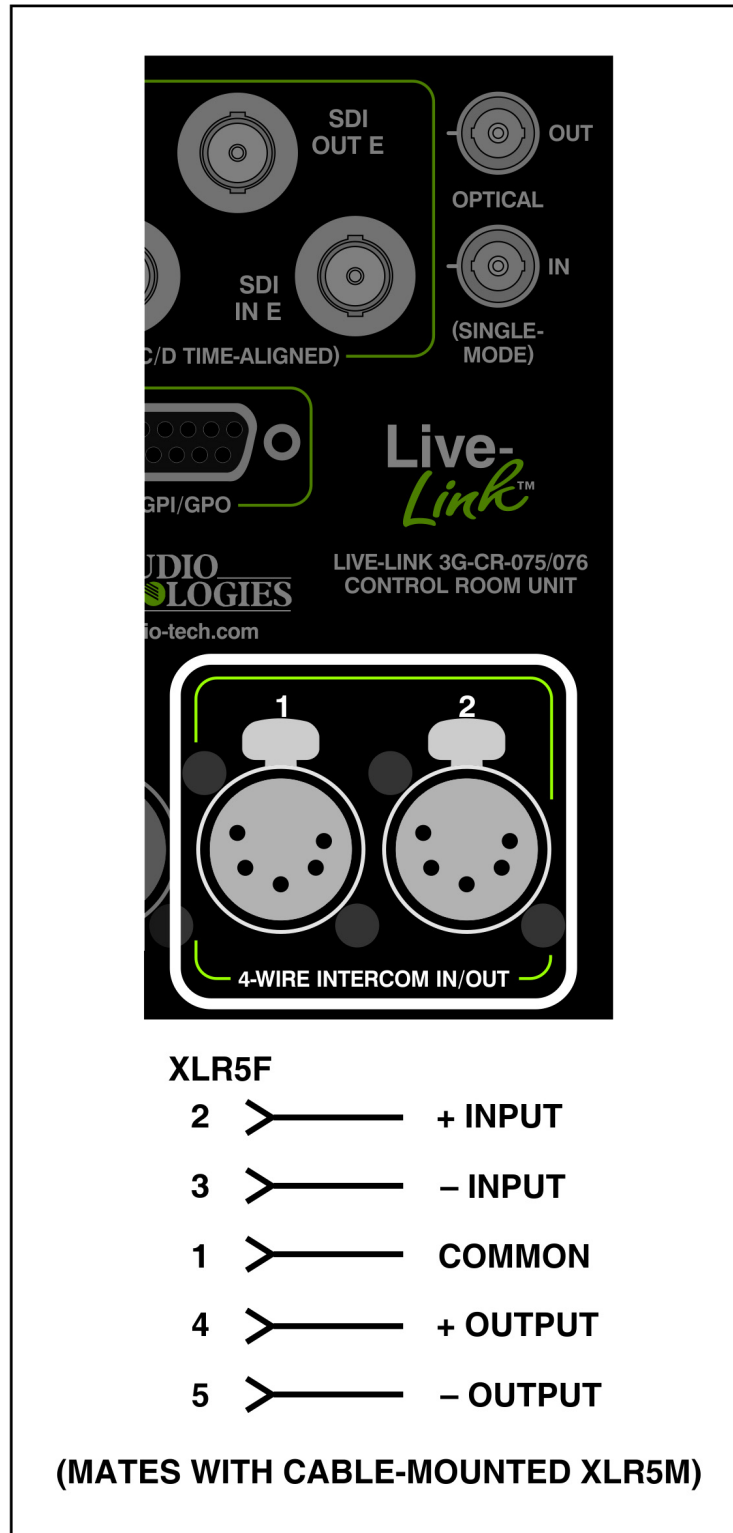




# Optical Output/Input – Camera End and Control Room Units

Camera End Unit shown. Connections are the same for Control Room Unit.




## DC Power Connections – Camera End and Control Room Units

Camera End Unit shown. Connections are the same for Control Room Unit.

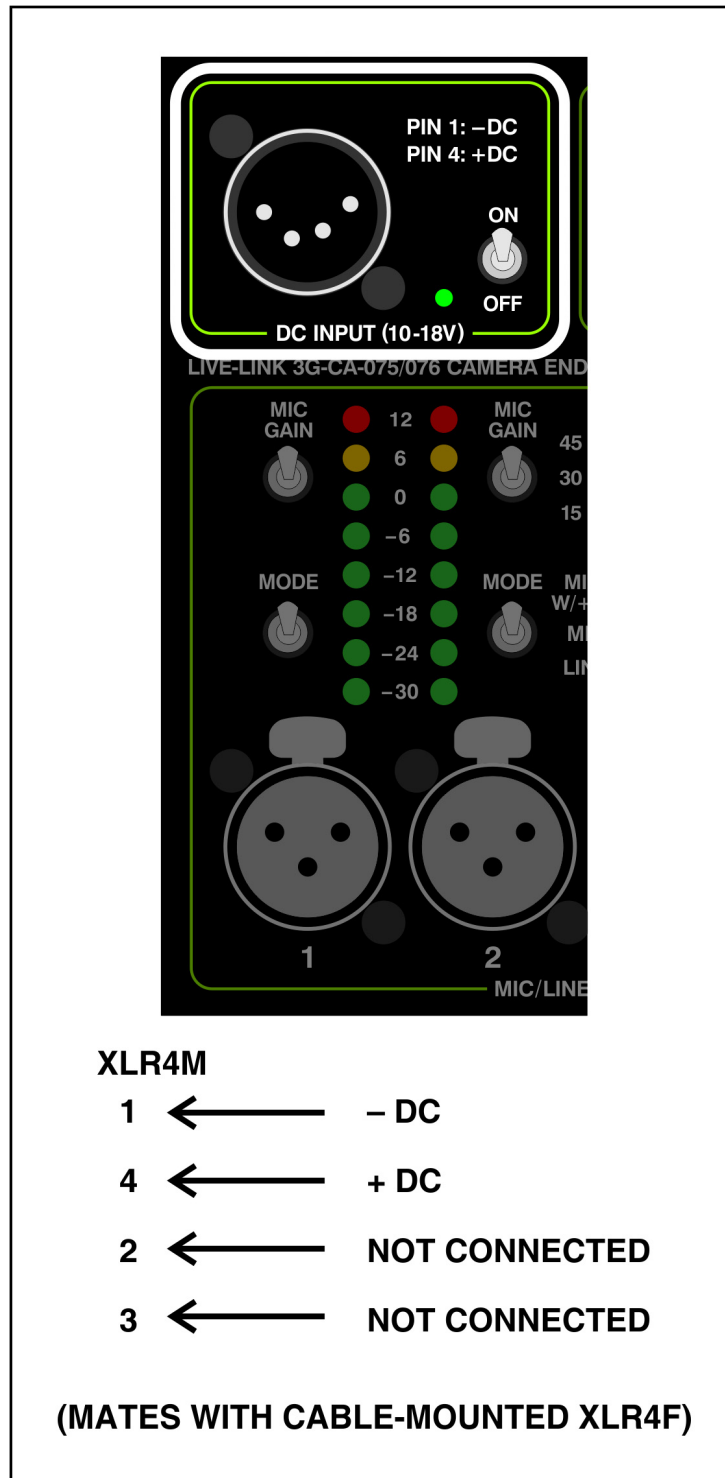

# Data, GPI, GPO, and Aux Power Connections – Camera End and Control Room Units

Camera End Unit shown. Connections are the same for Control Room Unit.

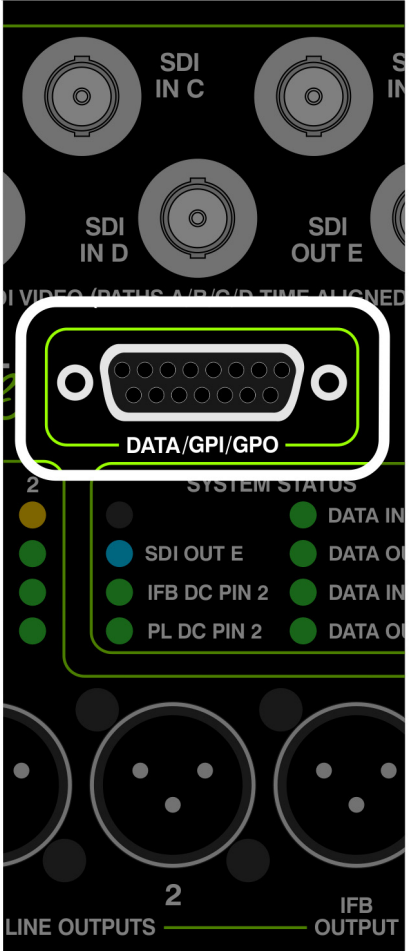

**RS-232 DATA, RS-422 DATA, GPI, GPO,  
AND AUX POWER CONNECTIONS**

**DA15F\* PANEL MOUNT  
(MATES WITH CABLE-MOUNTED DA15M\*)**

1: COM	5: 422 RX+	11: GPI 1
2: 232 RX	6: 422 RX-	12: COM
3: 232 TX	7: 422 TX+	13: GPI 2
4: +12V	8: 422 TX-	
9: ]	14: ]	
10: ]	15: ]	

**\* ALSO KNOWN (INCORRECTLY) AS DB15 TYPE**