



Model 362 Listen-Only Beltpack

Configuration Guide

This Configuration Guide is applicable for the following serial numbers: M362-00151 and later with application firmware 1.1 and later and Dante firmware 2.1.1 (Ultimo 3.10.1.12) and later



Accessing DIP Switches

The DIP switches are located on the back of the Model 362 under the belt clip. To gain access remove the belt clip's Phillips-head screw (6-32 thread pitch). Then rotate the belt clip to expose the switches. Replace the screw after configuration has been completed.

SW1 & SW2 – Headphone Output Mode



Level / Level

Input 1 to left output; potentiometer CH 1 adjusts level.
Input 2 to right output; potentiometer CH 2 adjusts level.



Level / Balance

Input 1 to left output, input 2 to right output.
CH 1 adjusts level of both outputs; CH 2 adjusts L/R balance.



Dual-Channel Monaural

Input 1 to both left and right outputs; CH 1 adjusts level.
Input 2 to both left and right outputs; CH 2 adjusts level.



Single-Channel Monaural

Input 1 to left output; CH 1 adjusts level.
Input 2 to left output; CH 2 adjusts level.
No signal to right output.

SW3 – Headphone Minimum Level



–40 dB



Full mute

SW4 – Reserved for Future Use