




Model 230

Announcer's Console




Configuration Guide

Model 230 configuration settings label as affixed to security plate

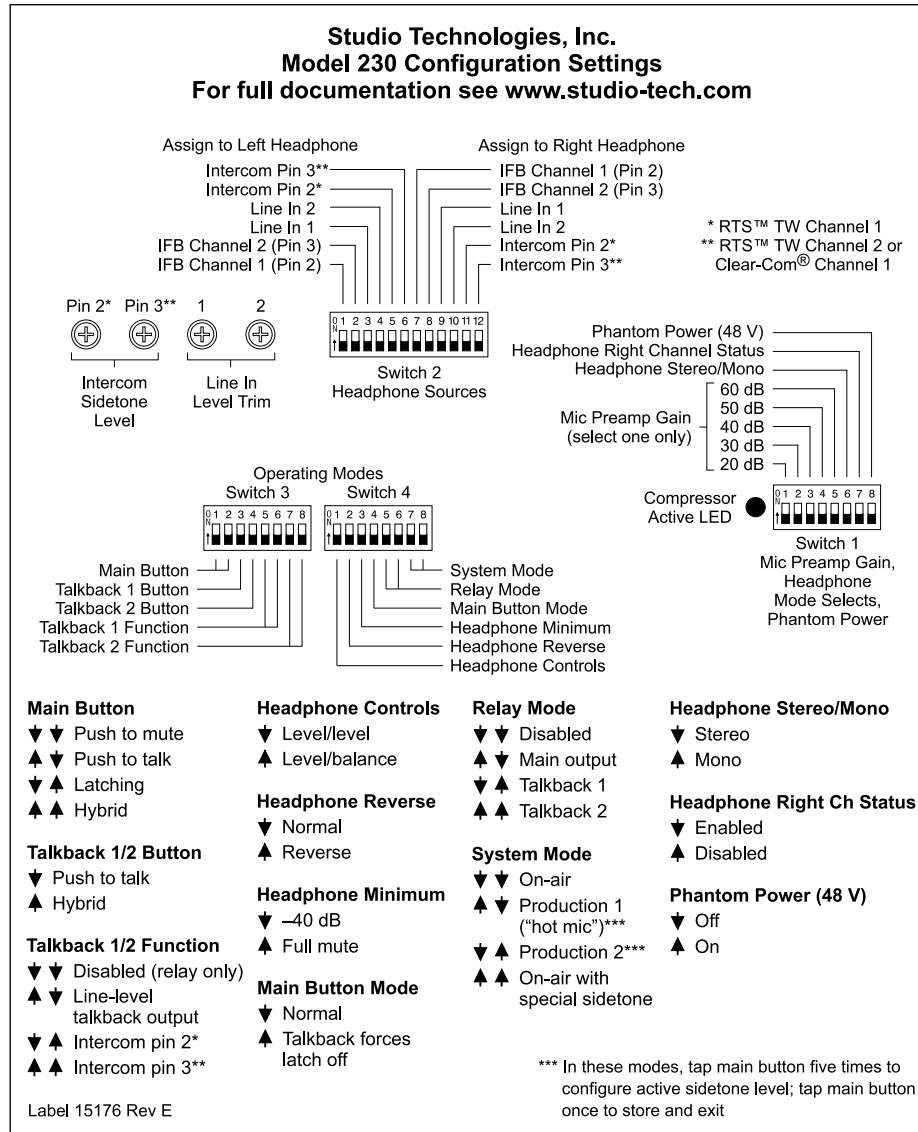

Actual size 4.80" x 5.90"
Cut along lines for use as a spare

Model 230 Bottom Panel

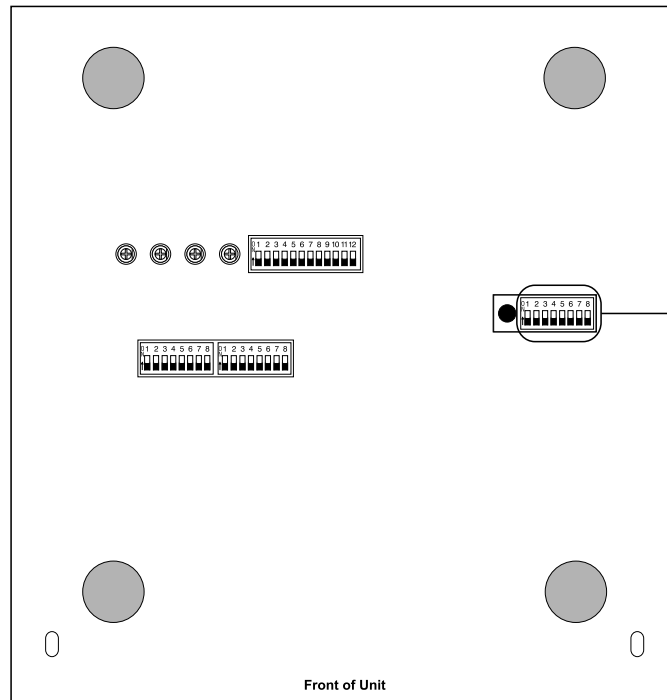

SW1-1 through SW1-5 – Mic Preamp Gain

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
20 dB

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
30 dB

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
40 dB

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
50 dB

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
60 dB

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
0 dB (no gain) Factory use only!

SW1-6 – Headphone Output Mode

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
Stereo

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
Mono (sums L+R)

SW1-7 – Headphone Right Channel Status

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
Enabled

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
Disabled


SW1-8 – Phantom Power (48 V)

0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
Off


0 1 2 3 4 5 6 7 8
N ↑ 0 1 2 3 4 5 6 7 8
On

Model 230 Bottom Panel

**Switch 2 Settings
Detailed Below**

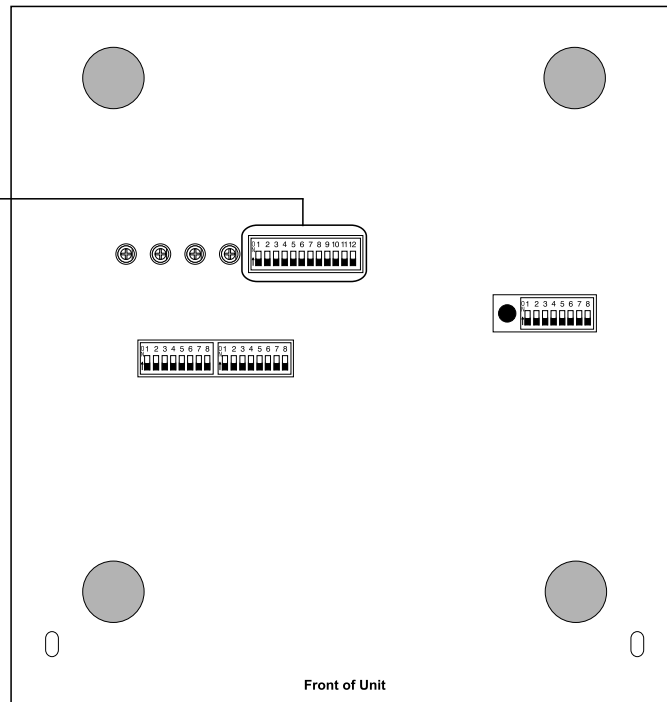

SW2-1 through SW2-6 – Left Channel Headphone Source Selection

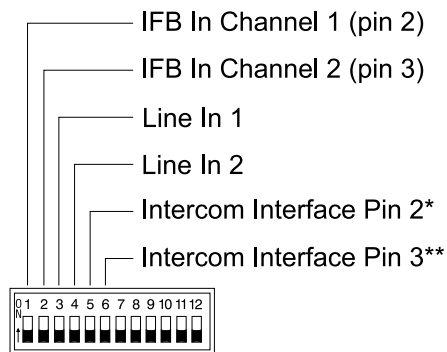


On to enable source; multiple sources will sum

* RTS™ TW Channel 1

** RTS™ TW Channel 2, Clear-Com® Channel 1

SW2-7 through SW2-12 – Right Channel Headphone Source Selection

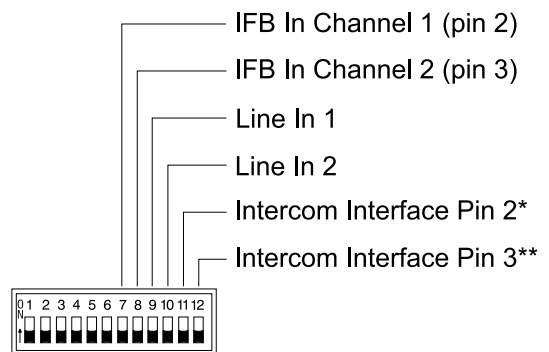


On to enable source; multiple sources will sum

* RTS™ TW Channel 1


** RTS™ TW Channel 2, Clear-Com® Channel 1

Model 230 Bottom Panel


**Switch 3 Settings
Detailed Below**

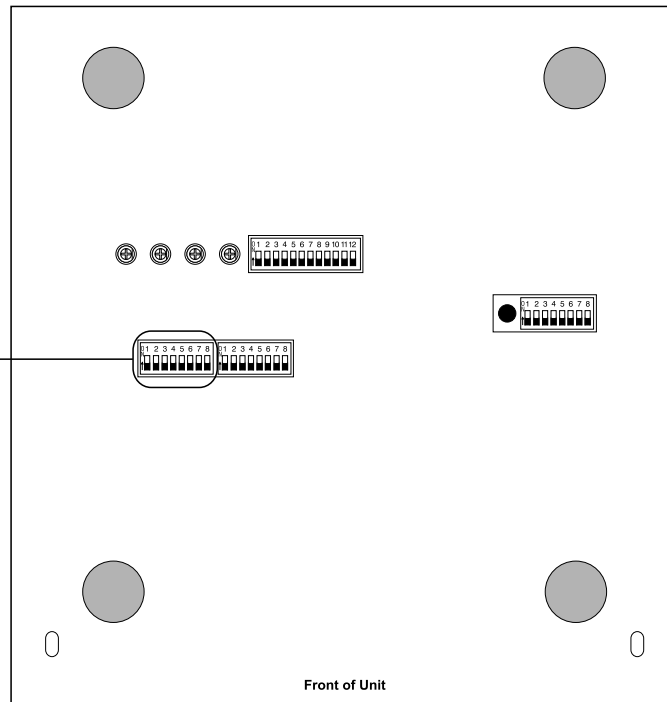


SW3-1 and SW3-2 – Main Button Mode

 


Push to mute (“cough”)

 

Push to talk

 


Alternate action (“latching”)

 


Hybrid (press and hold to enable, tap to latch)

 
SW3-5 and SW3-6 – Talkback 1 Function Mode




Disabled (unless assigned to relay)

 

Talk to talkback output

 

Talk to intercom interface pin 2*

 


Talk to intercom interface pin 3**

SW3-3 – Talkback 1 Button Mode




 Push to talk




Hybrid (press and hold to enable, tap to latch)

 SW3-4 – Talkback 2 Button Mode




Push to talk

 


Hybrid (press and hold to enable, tap to latch)

 
SW3-7 and SW3-8 – Talkback 2 Function Mode




Disabled (unless assigned to relay)

 

Talk to talkback output

 

Talk to intercom interface pin 2*

 


Talk to intercom interface pin 3**

* RTS™ TW Channel 1

** RTS™ TW Channel 2, Clear-Com® Channel 1


Model 230 Bottom Panel

Switch 4 Settings
Detailed Below

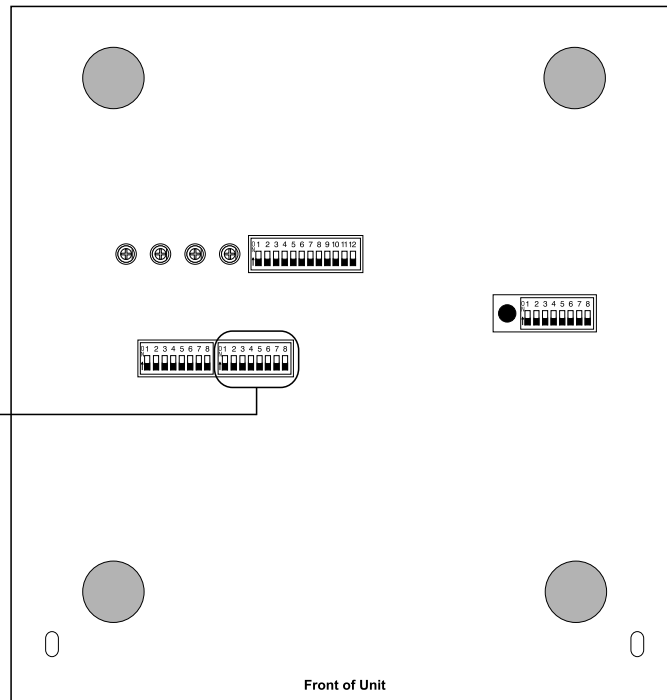


Front of Unit

 SW4-1 – Headphone Control Mode




Dual channel ("level/level")

 


Stereo ("level/balance")

 SW4-2 – Headphone Control Operation




Normal

 


Reverse left/right

 SW4-3 – Headphone Output Minimum Level




-40 dB

 


Full mute

 SW4-4 – Main Button Mode




 Normal (talkback does not "unlatch" main output)




Force off (talkback forces main button to "unlatch")

 
SW4-5 and SW4-6 – Relay Control Mode




Relay disabled

 

Follows main output status

 


Follows talkback 1 button status

 


Follows talkback 2 button status

 
SW4-7 and SW4-8 – System Mode



 
On-air (talkback output status impacts main output status)



 
Production 1 (main out is "hot mic"; main out button controls line-level talkback out)



 Production 2 (talkback output status does not impact main output status)



On-air with special sidetone (talkback output status impacts main output status; sidetone audio sent to headphone output)

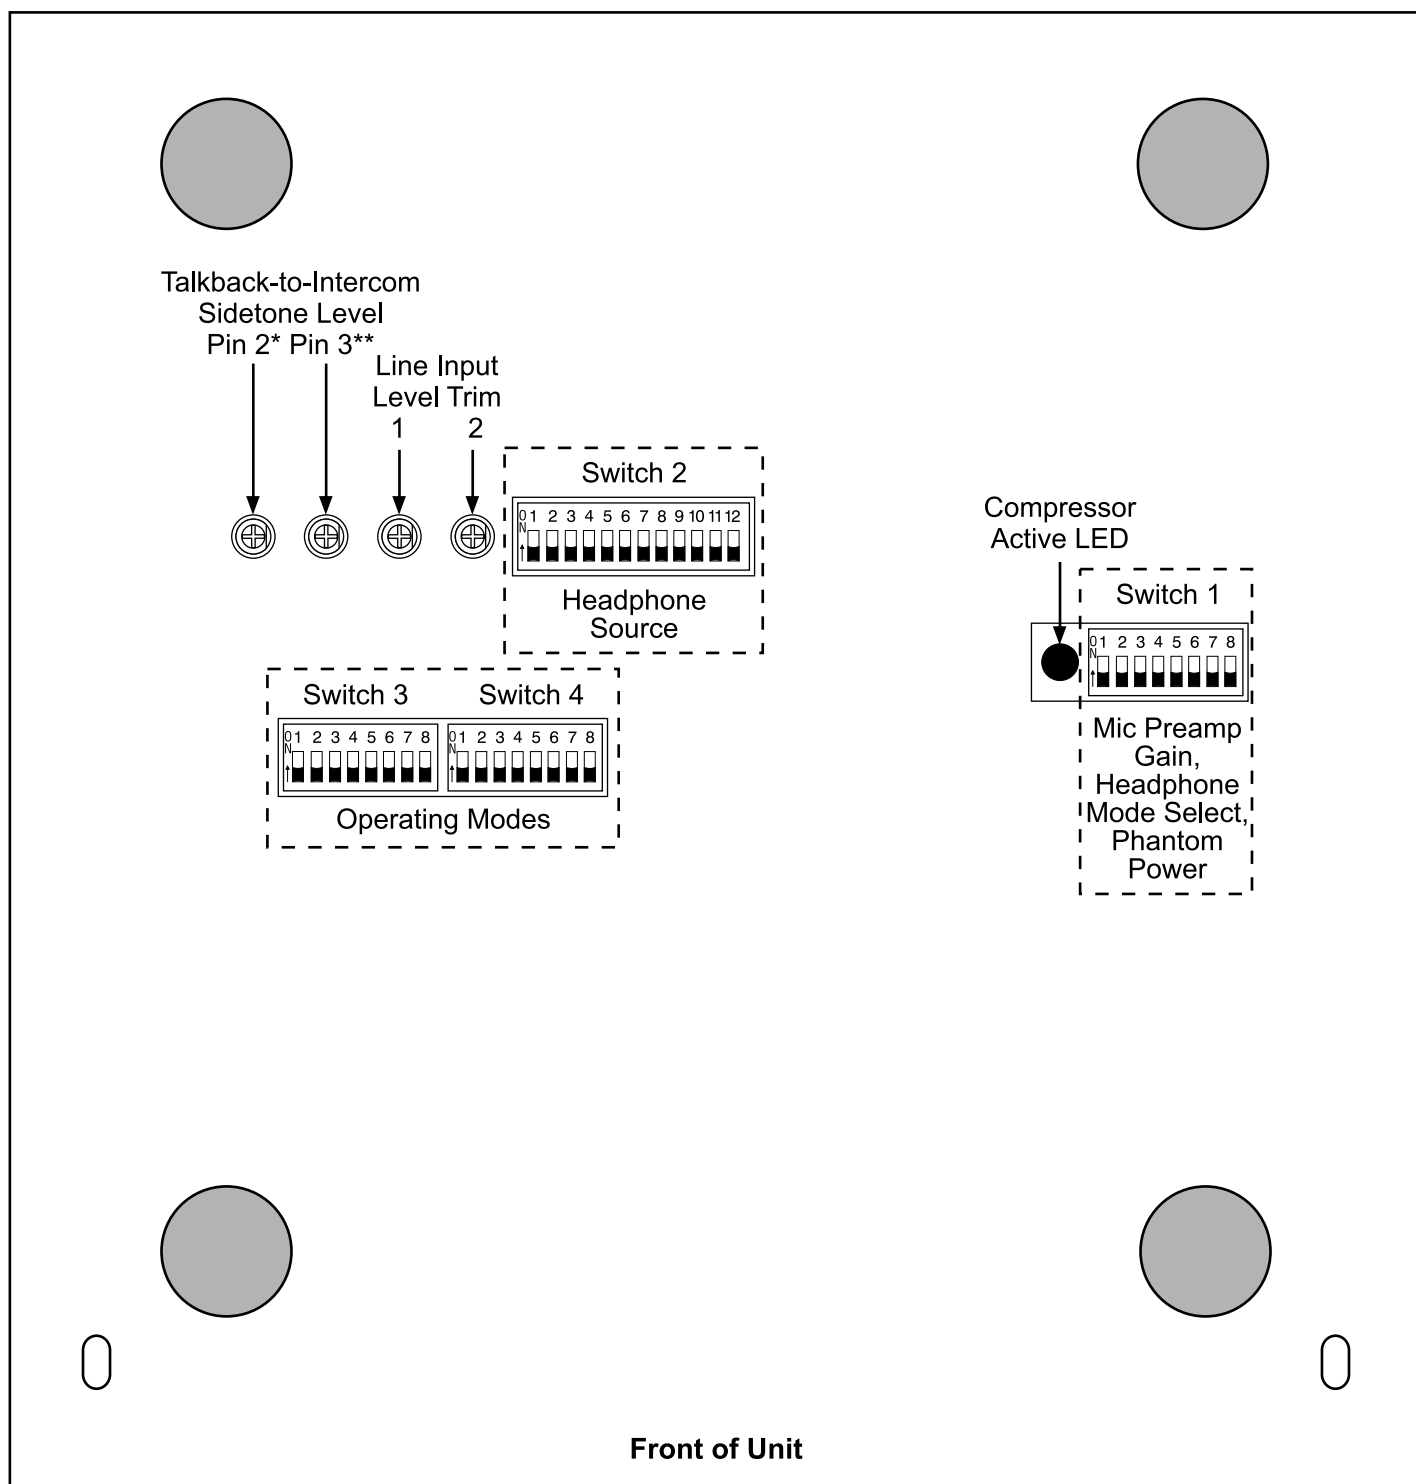

* RTS™ TW Channel 1

** RTS™ TW Channel 2, Clear-Com® Channel 1