


Model 5418 Front-Panel Menu Structure


Button-Controlled Menus

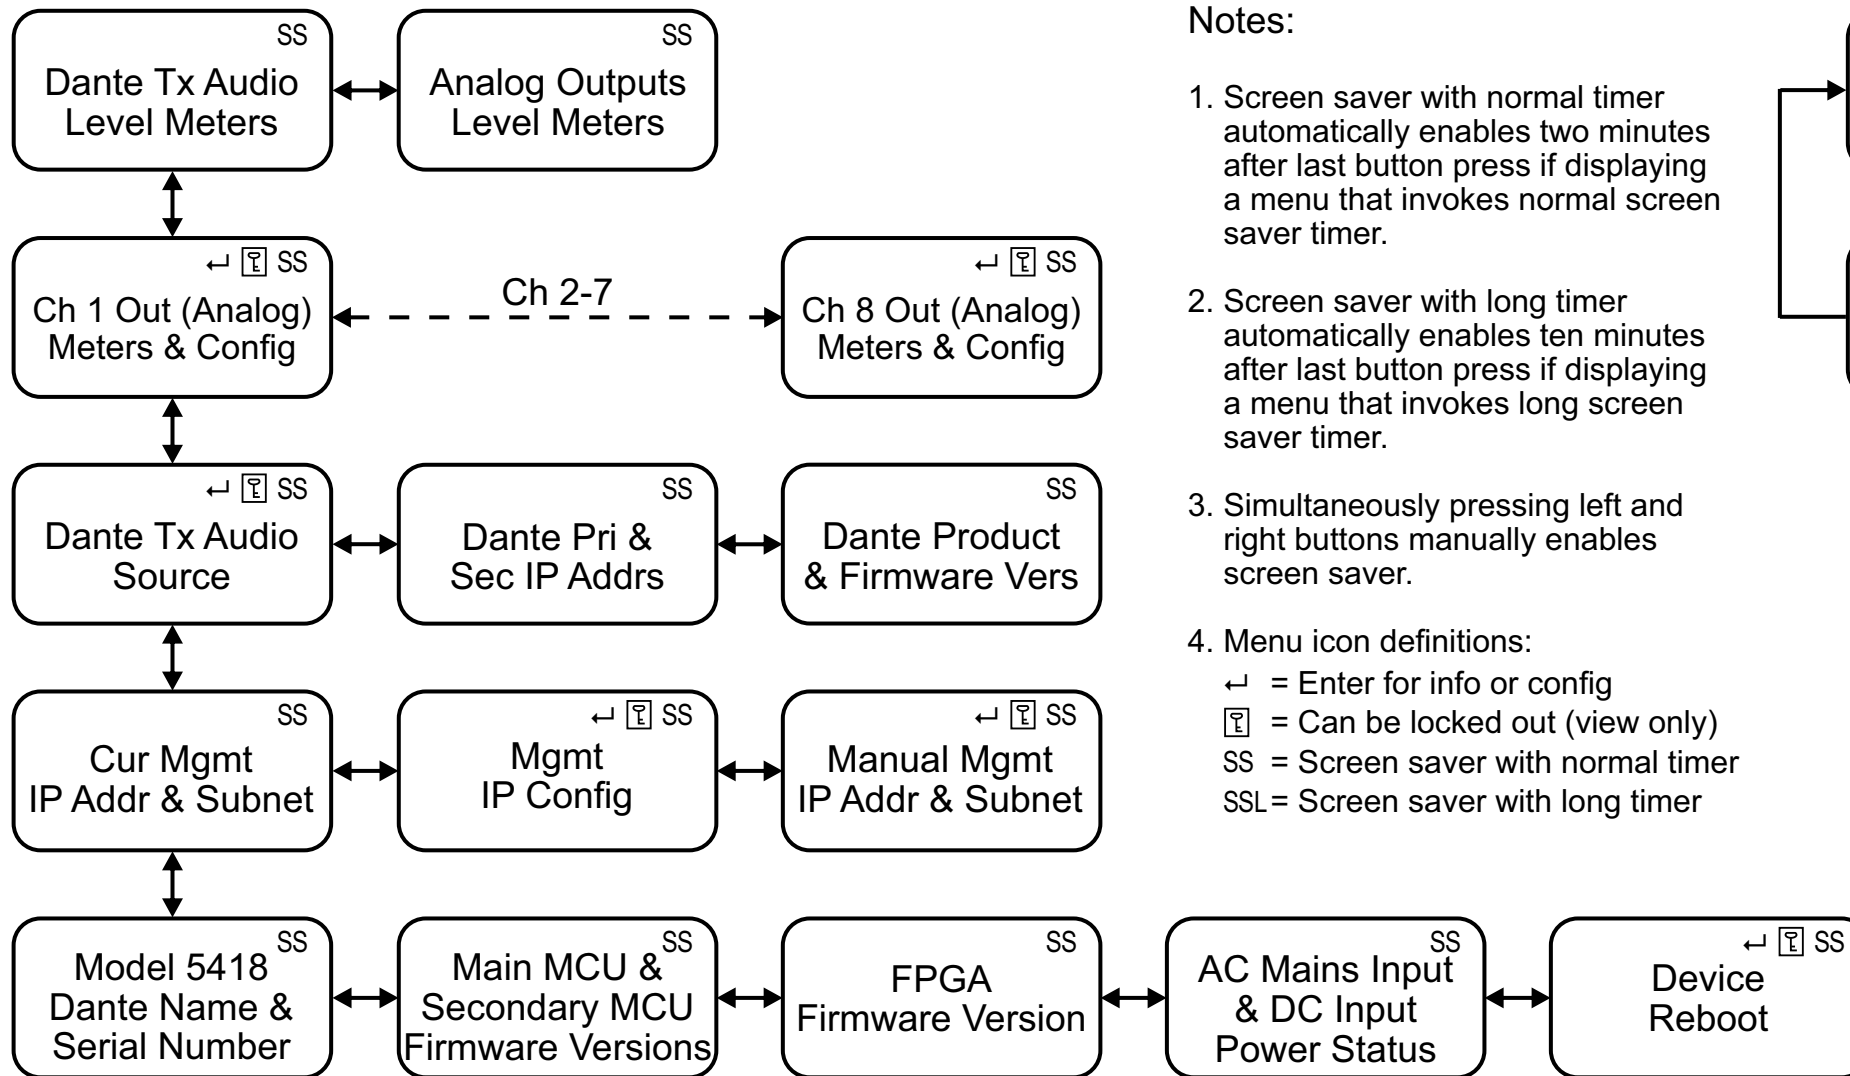

Notes:

1. Screen saver with normal timer automatically enables two minutes after last button press if displaying a menu that invokes normal screen saver timer.
2. Screen saver with long timer automatically enables ten minutes after last button press if displaying a menu that invokes long screen saver timer.
3. Simultaneously pressing left and right buttons manually enables screen saver.
4. Menu icon definitions:
 ↵ = Enter for info or config
 [L] = Can be locked out (view only)
 SS = Screen saver with normal timer
 SSL = Screen saver with long timer

Screen Saver Menus

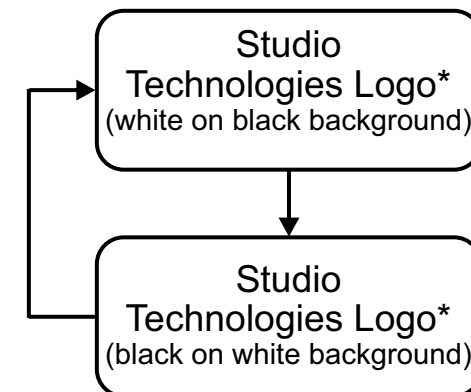

* Each screen displays for five seconds before transitioning to the next screen

Access Input Menu by pressing one of the eight channel select buttons

