


# Model 5412-01 / -02 Menu Structure

## Button-Controlled Menus

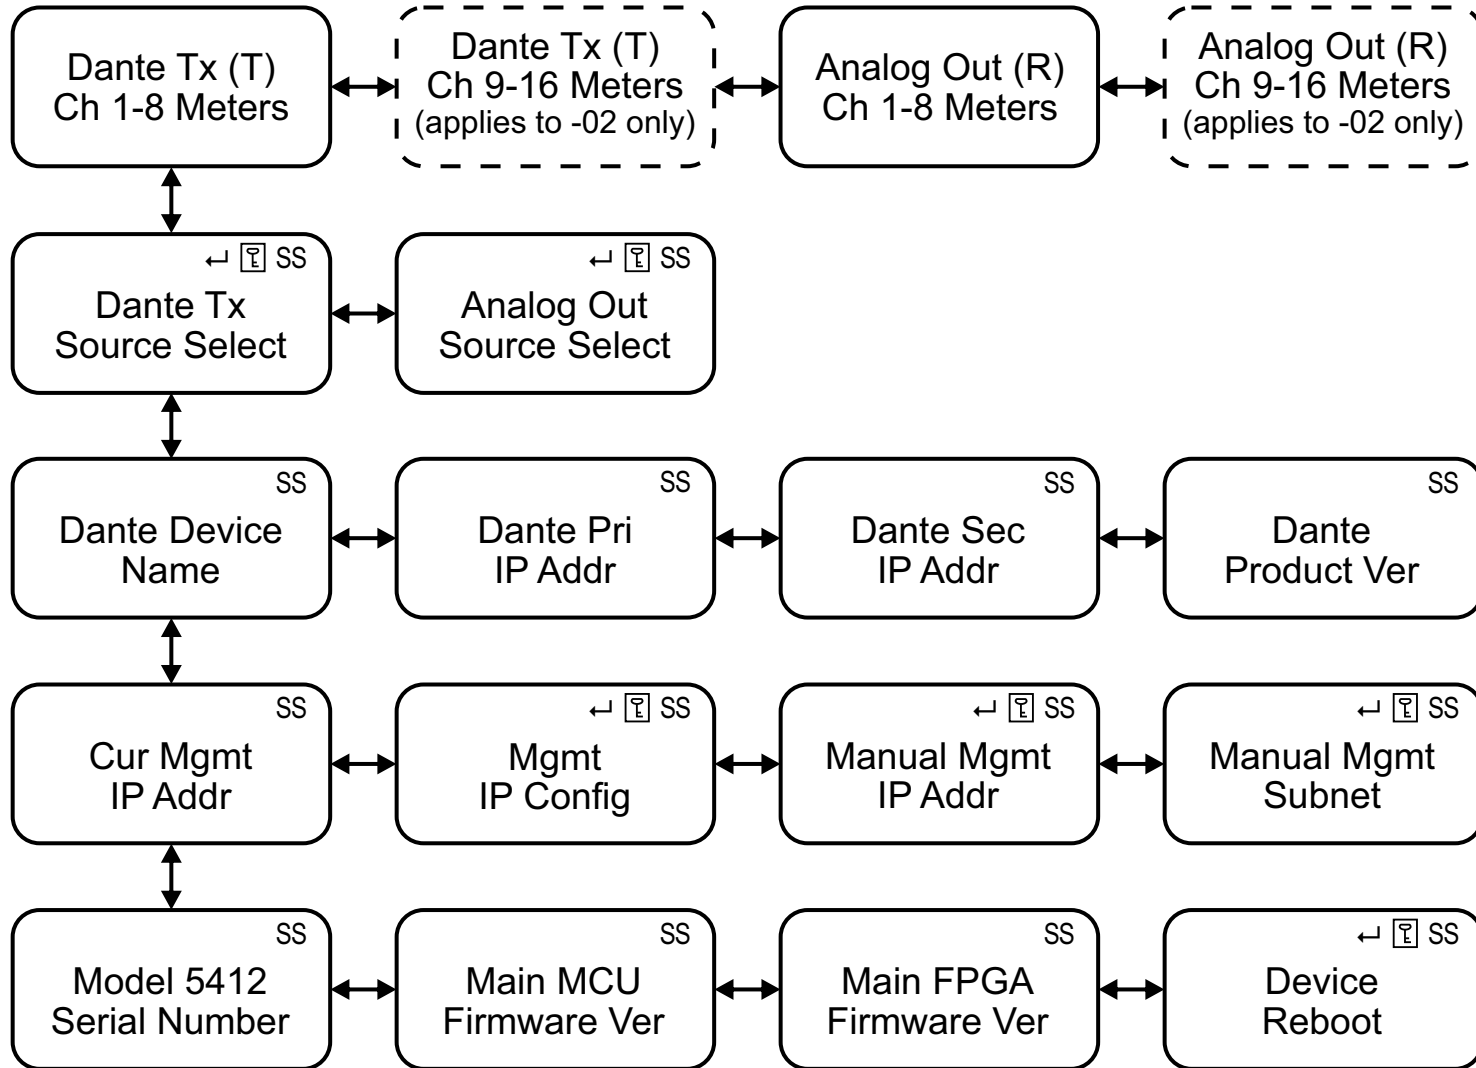

### Notes:

1. Screen saver automatically enables two minutes after last button press if displaying a menu that invokes screensaver timer.
2. Simultaneously pressing left and right buttons manually enables screen saver.
3. Menu icon definitions:  
 ↵ = Enter for info or config  
 🔒 = Can be locked out  
 📄 = Screen currently locked  
 SS = Screensaver timer enabled

