



Model 5422A Front-Panel Menu Structure

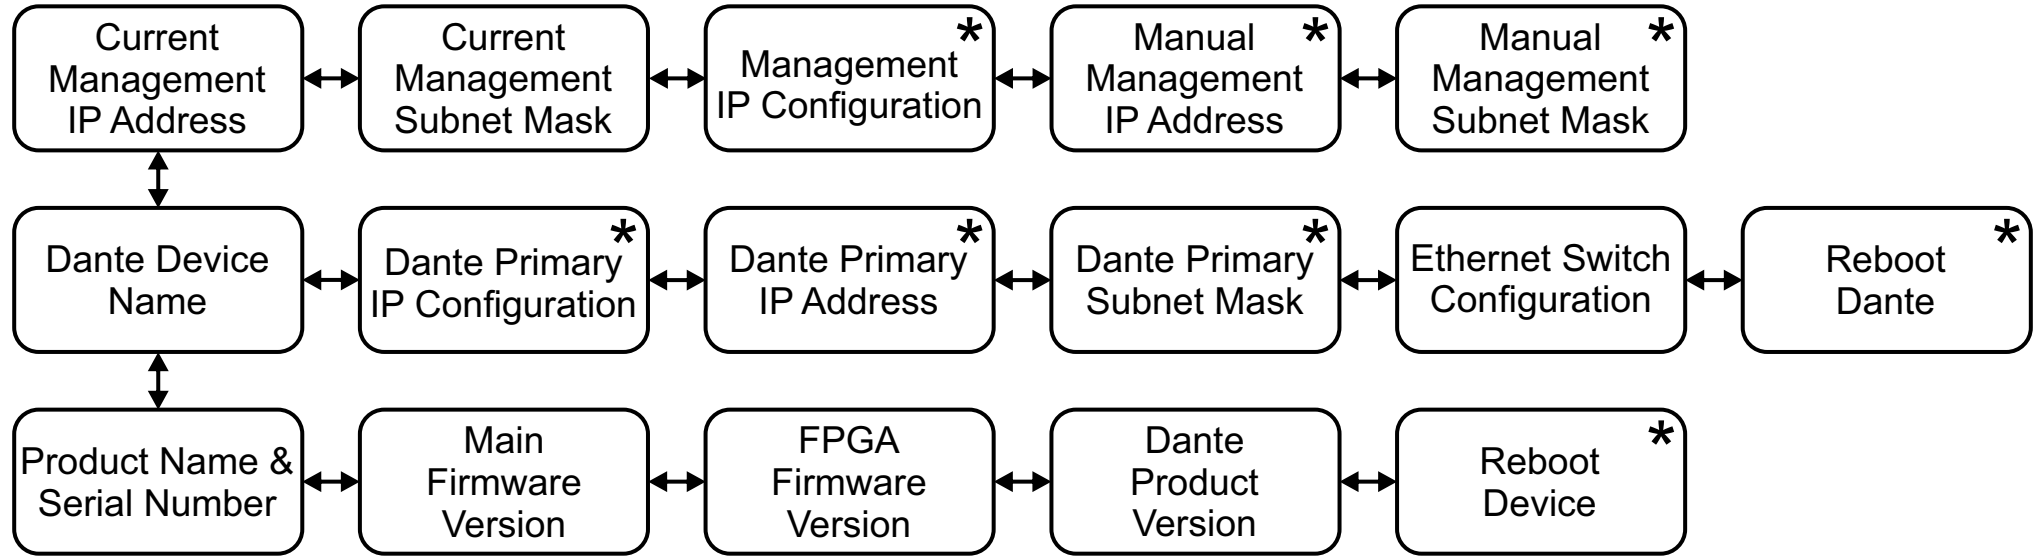

Screen Saver (each screen active for approximately four seconds)

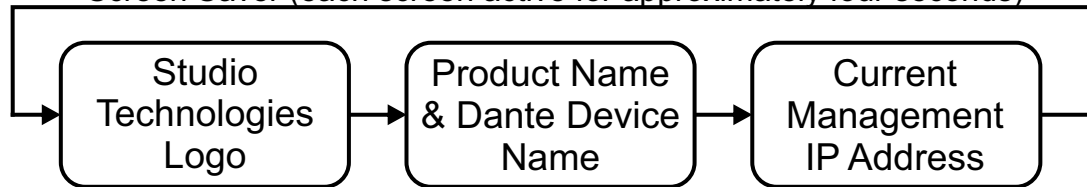

* Menu icon definitions:

↔ = Enter for info or editing

🔒 = Locked - No editing

✂ = Edit in process

🔄 = Reboot for changes to take effect

1. Screen saver automatically activates two minutes after last button press.
2. Press left and right buttons simultaneously to immediately enter screen saver mode.
3. Pressing Enter while screen saver is active goes directly to Current Management IP Address page.

**STUDIO
TECHNOLOGIES
INC.**

studio-tech.com

50712-0621, Issue 3

© Copyright Studio Technologies, Inc. 2021