



Model 5402 Front-Panel Menu Structure

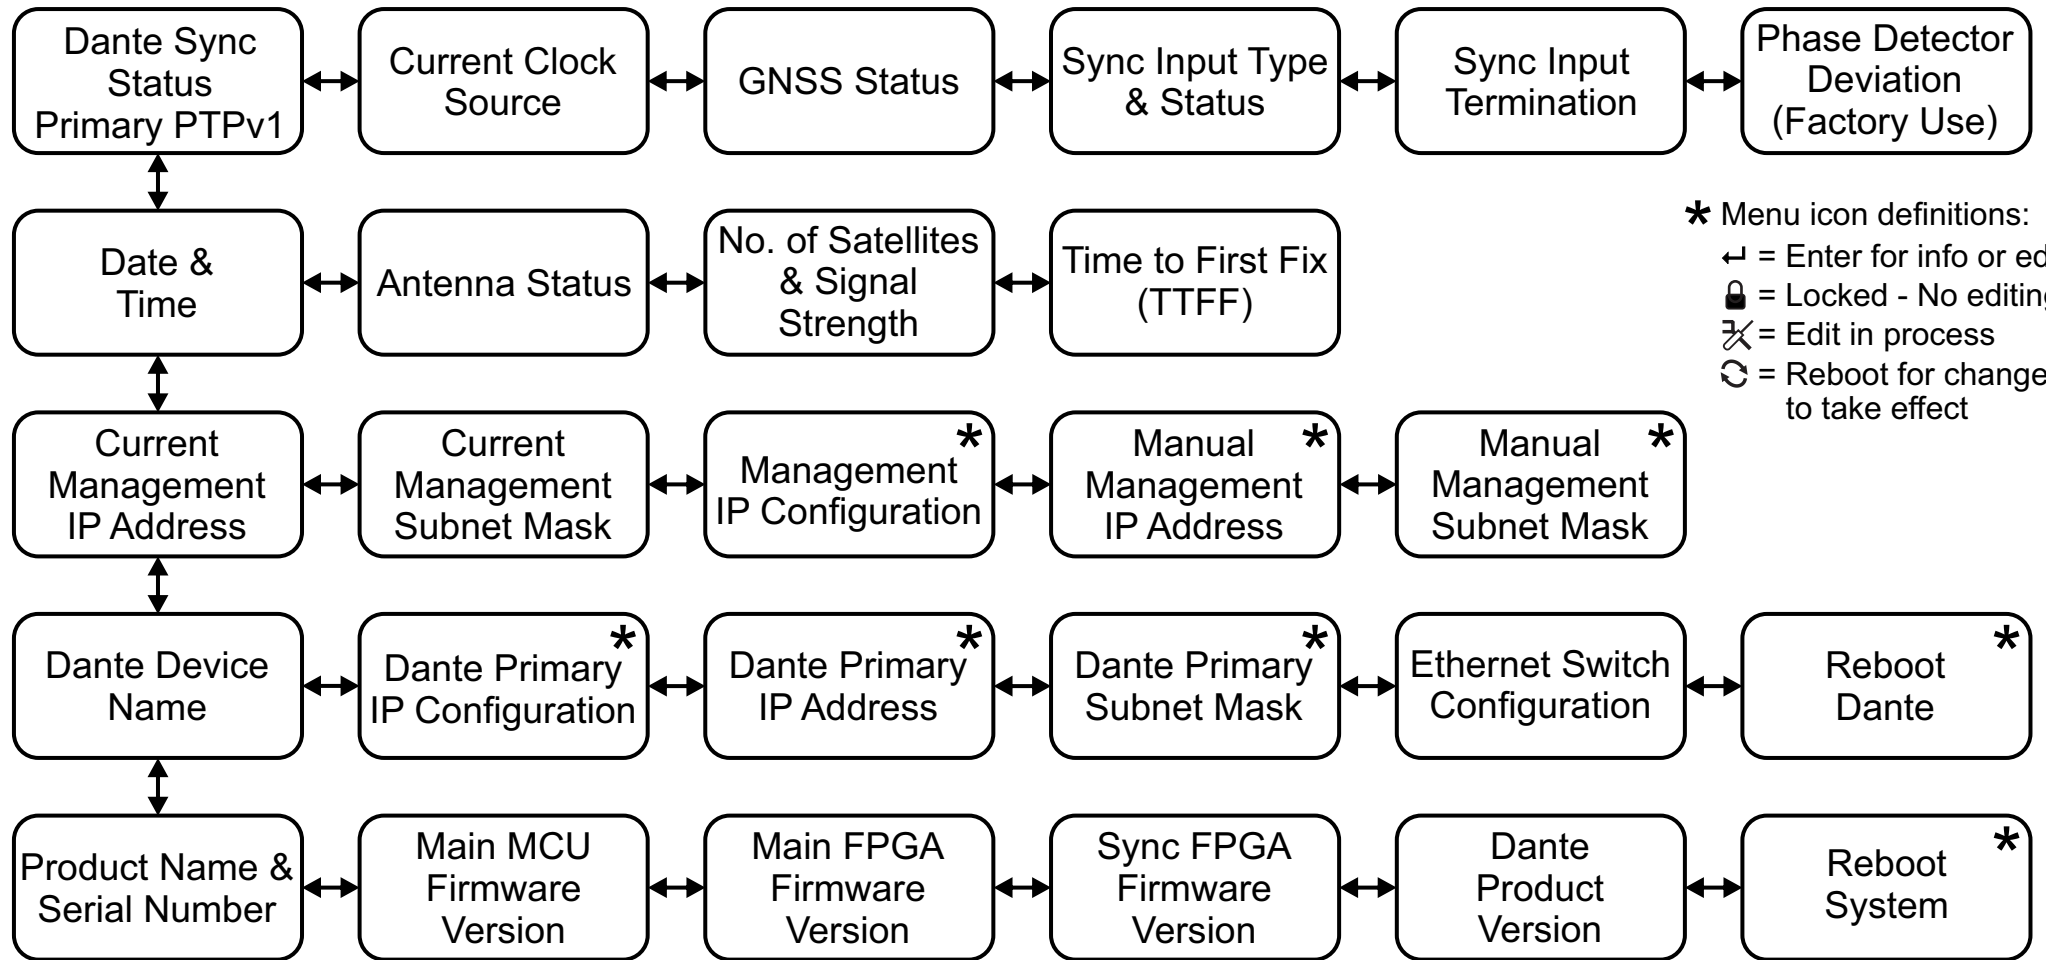

- * Menu icon definitions:
- ↔ = Enter for info or editing
 - 🔒 = Locked - No editing
 - ✂ = Edit in process
 - 🔄 = Reboot for changes to take effect

Screen Saver (each screen active for approximately three seconds)

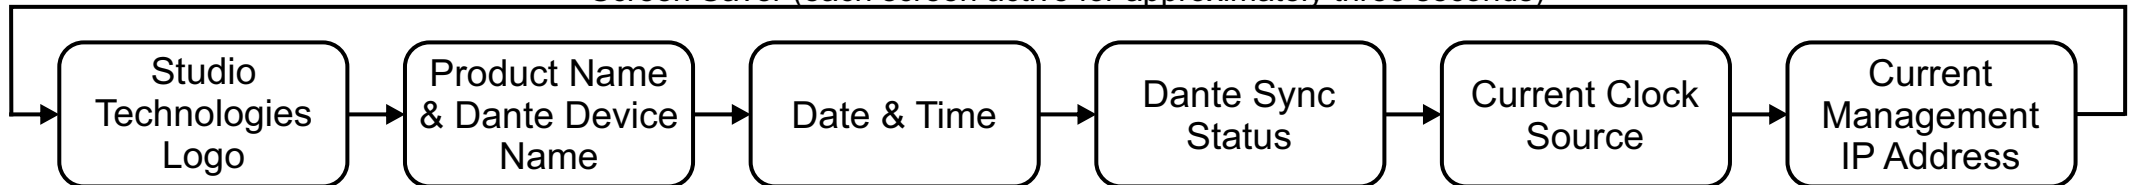

1. Screen saver automatically activates two minutes after last button press.
2. Press left and right buttons simultaneously to immediately enter screen saver mode.
3. Pressing Enter while screen saver is active goes directly to Current Management IP Address page.
4. This reflects operation for Model 5402 Main MCU firmware version 1.00 and later.