



Model 5412-01 / -02 Front-Panel Menu Structure

Button-Controlled Menus

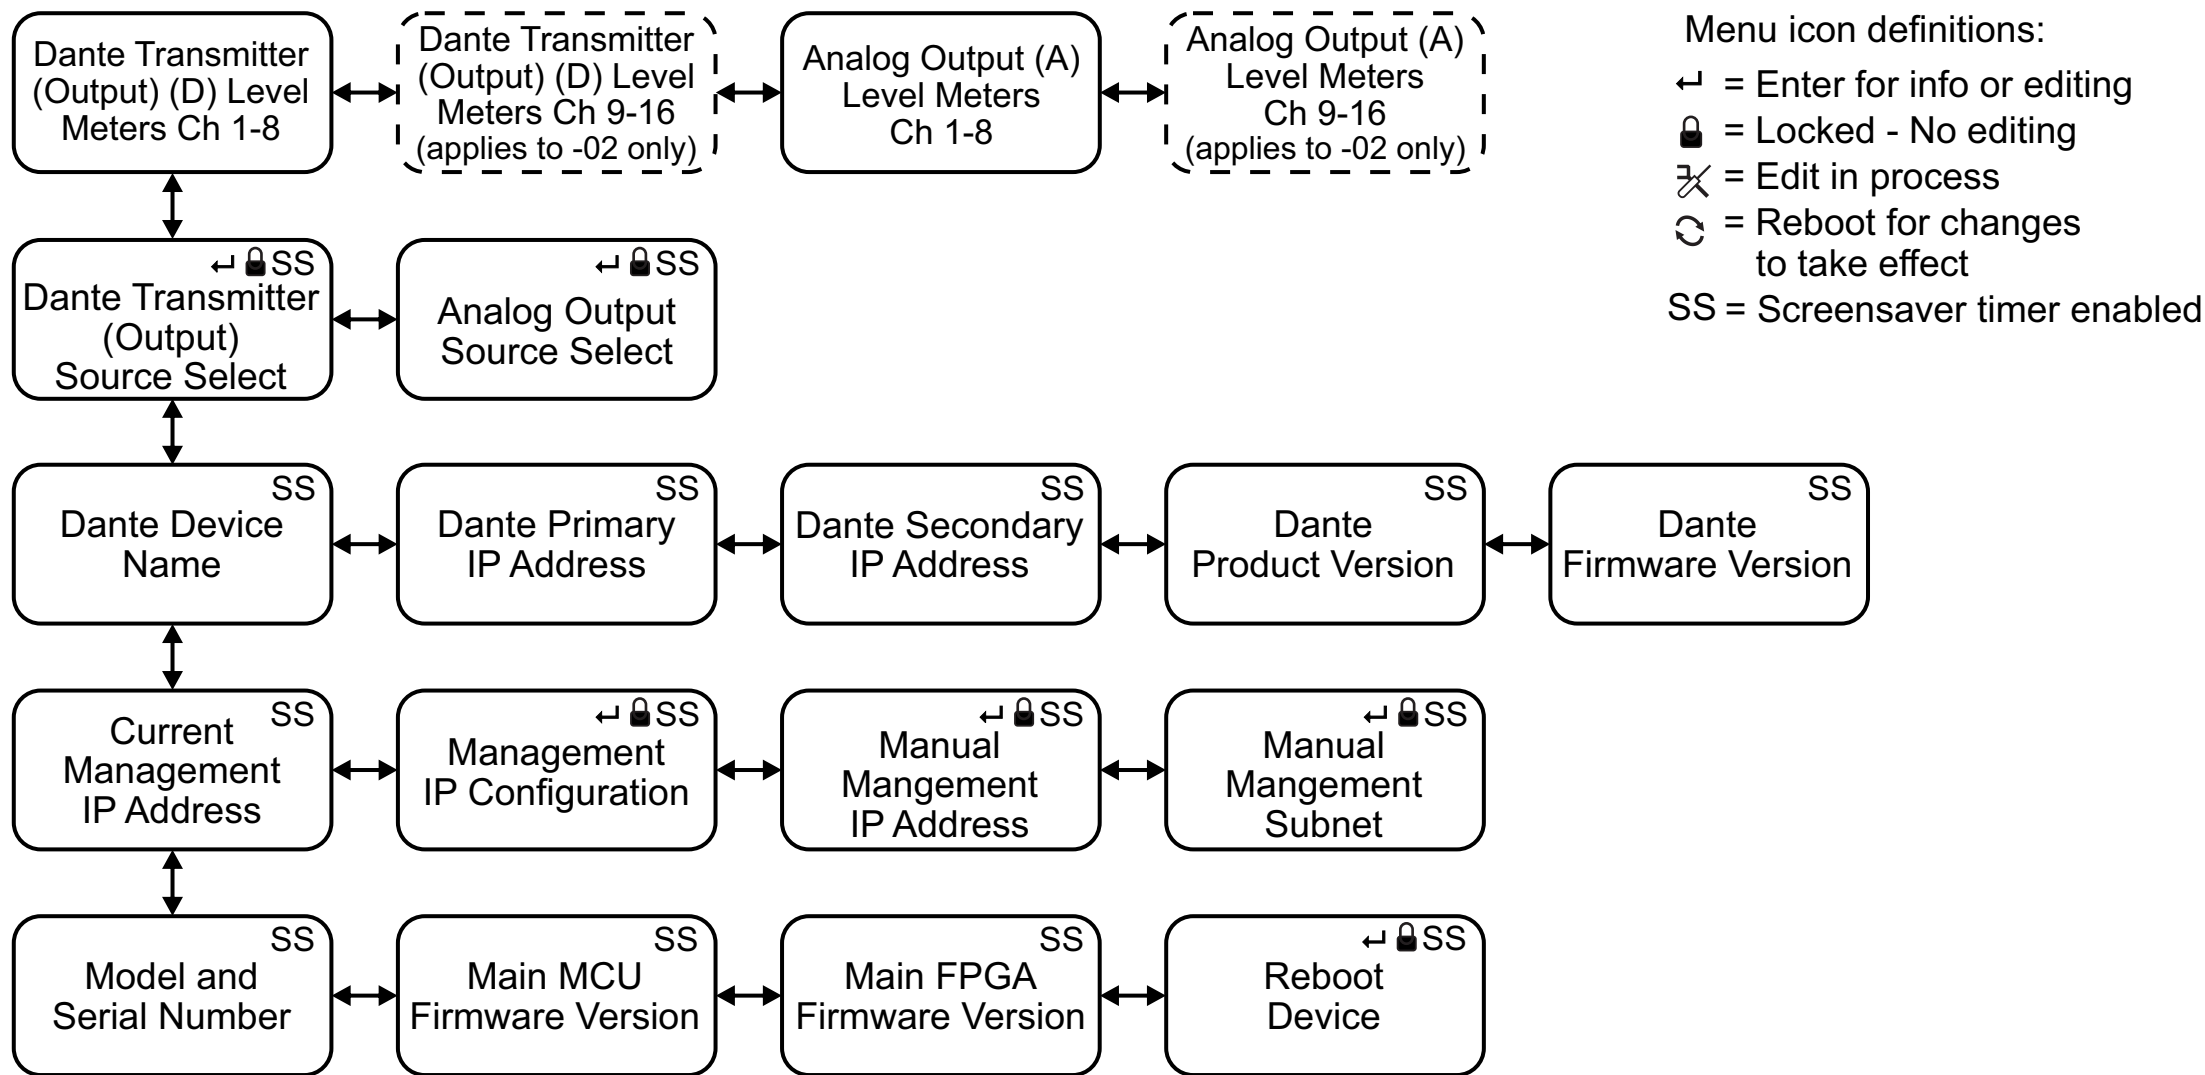

Menu icon definitions:
 ↵ = Enter for info or editing
 🔒 = Locked - No editing
 ✂ = Edit in process
 🔄 = Reboot for changes to take effect
 SS = Screensaver timer enabled

Screen Saver (each screen active for approximately three seconds)

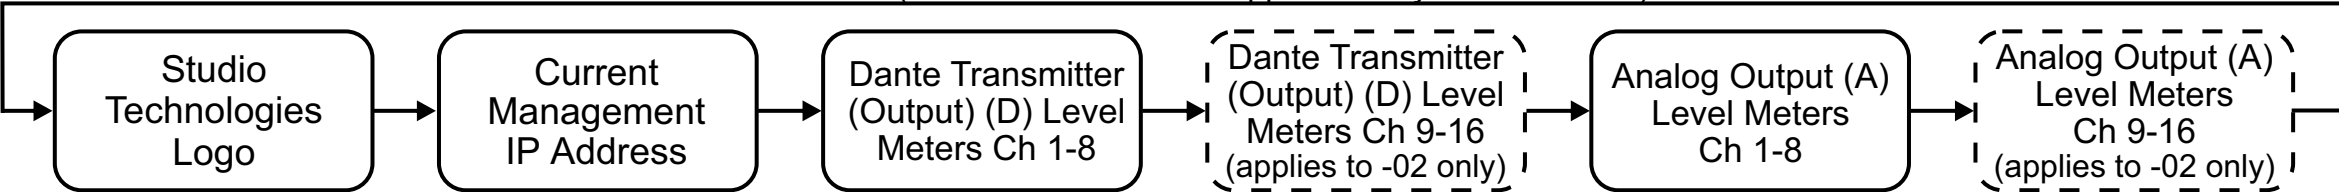

1. Screen saver automatically activates two minutes after last button press if displaying rows 2-5.
2. Press left and right buttons simultaneously to immediately enter screen saver mode.
3. Pressing Enter while screen saver is active goes to Current Management IP Address page.