



# Model 5518A Front-Panel Menu Structure

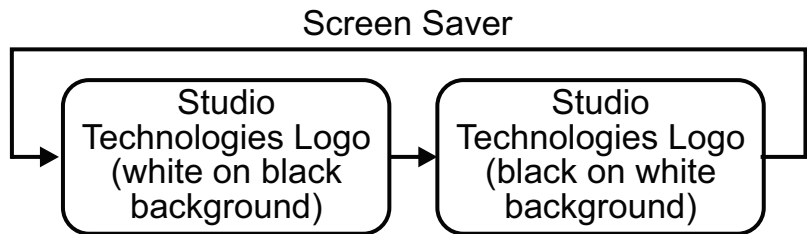

Each screen displays for five seconds before transitioning to the next screen

- Notes:
1. Screen saver automatically enables two minutes after last button press.
  2. Simultaneously pressing left and right buttons enables screen saver.
  3. Menu icon definitions:
    - ← = Enter for info or config
    - 🔒 = Can be locked out
    - SS = Screen saver timer enabled

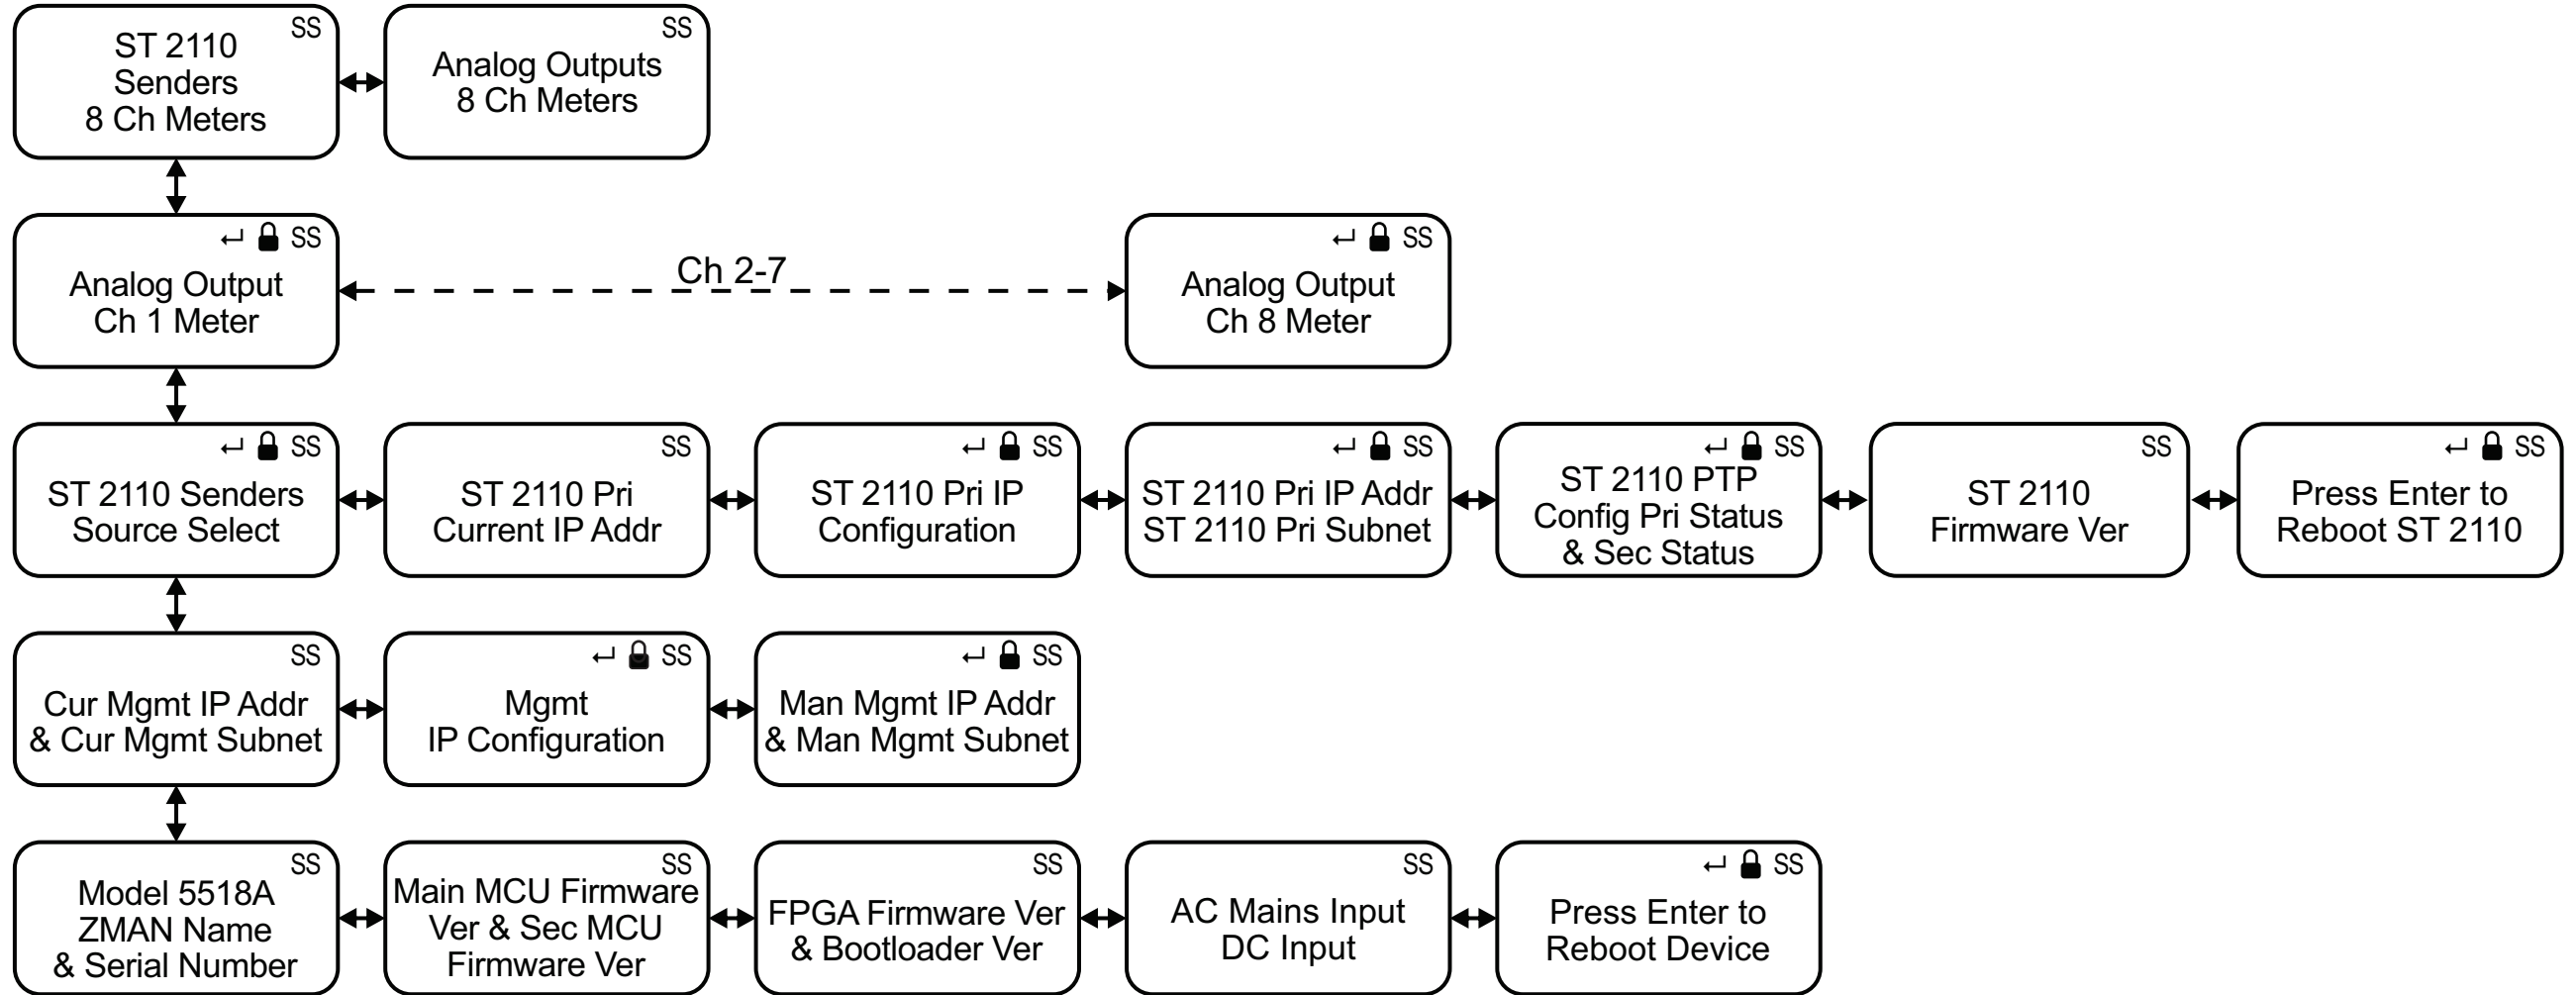