


Model 553X Front-Panel Menu Structure

Button-Controlled Menus

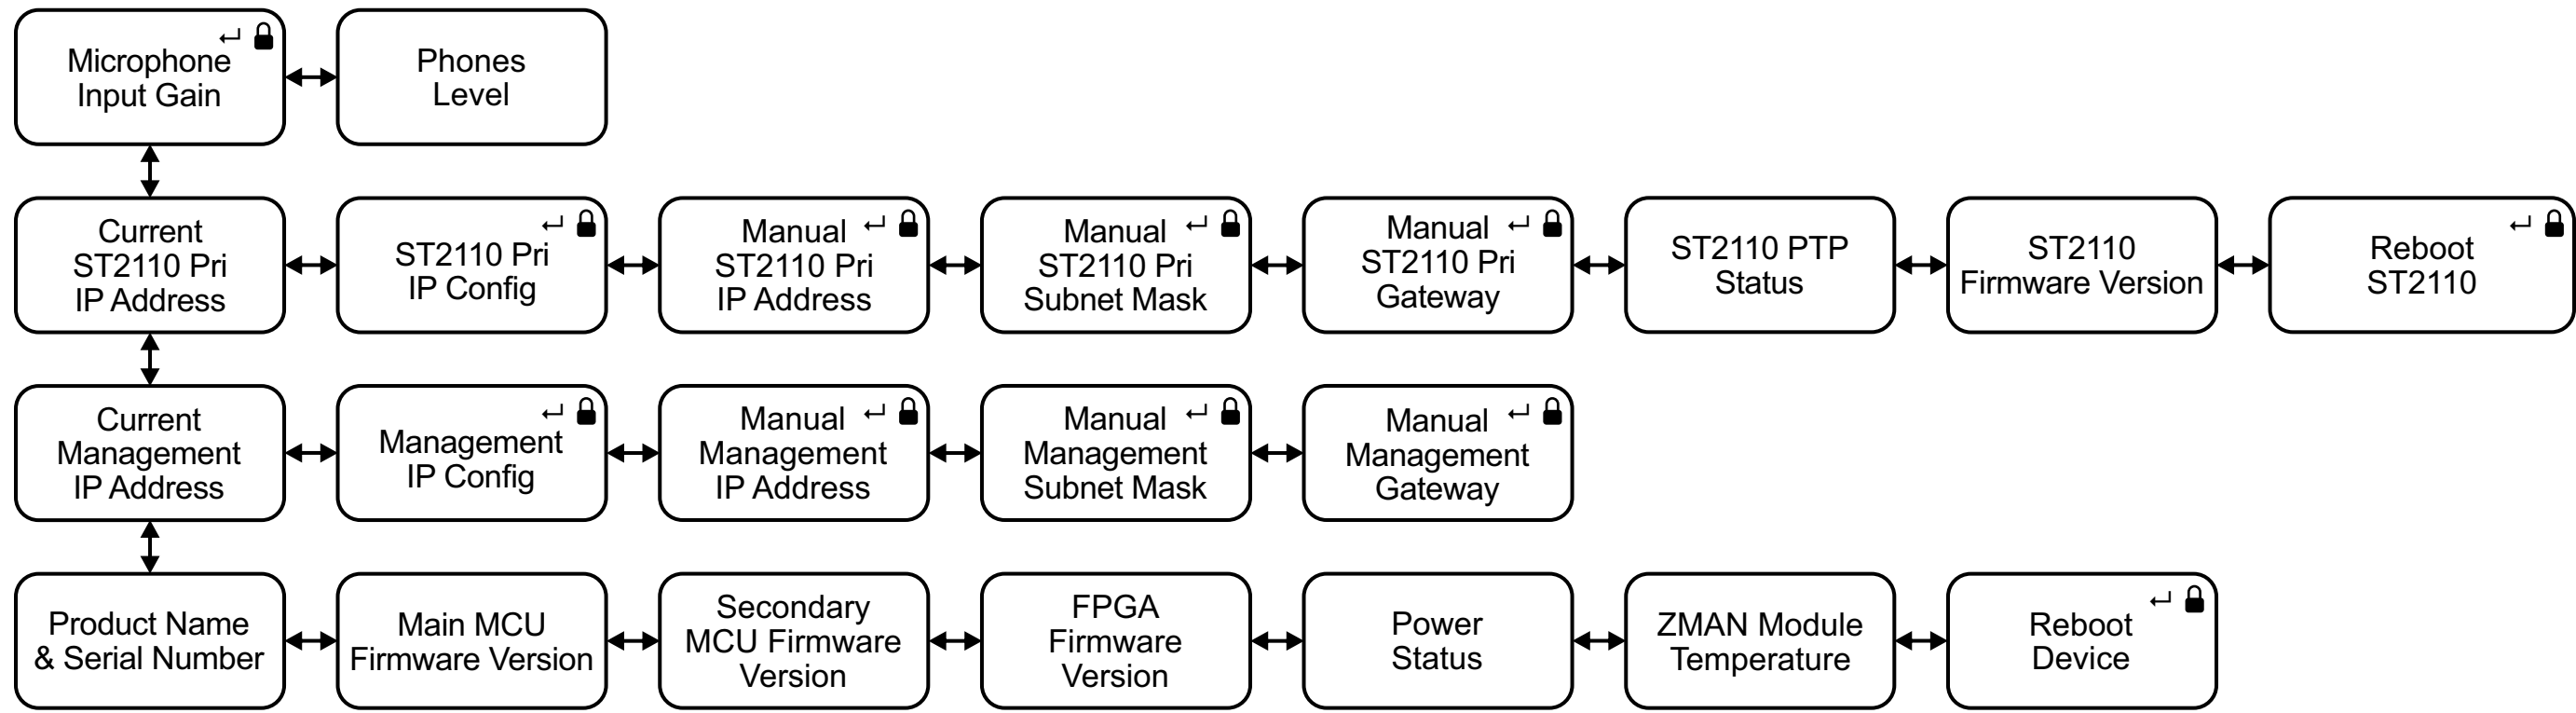

- Notes:
- 1. Screen automatically goes blank 30 seconds after last button press.
 - 2. Simultaneously pressing left and right buttons causes screen to go blank.
 - 3. Menu icon definitions:
 - ↵ = Enter for info or config
 - 🔒 = Can be locked out