



VenueView Example Screens

The Windows version of STcontroller also includes VenueView, a means of monitoring multiple Studio Technologies' devices. This is provided for technical personnel who need to maintain correct system operation of units in one or more physical locations. Real-time monitoring of audio level and signal presence is provided for the following Studio Technologies products:

Table of Contents

Model 204 Announcer's Console	2
Model 205 Announcer's Console	2
Model 206 Announcer's Console	3
Model 207A eSports Console	3
Model 209 Talent Console	4
Model 214A Announcer's Console	4
Model 215A Announcer's Console	5
Model 216A Announcer's Console	5
Model 232 Announcer's Console	6
Model 234 Announcer's Console	6
Model 236 Announcer's Console	7
Model 381 On-Air Beltpack	7
Model 385 Mic/Intercom Beltpack	8
Model 5205 Mic/Line to Dante Interface	8
Model 5206 Measurement Microphone Interface	9
Model 5418 Mic/Line Interface	10

Model 204 Announcer's Console



Model 204 Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 205 Announcer's Console



Model 205 Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 206 Announcer's Console



Model 206 Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 207A eSports Console




Model 207A eSports Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 209 Talent Console




Model 209 Talent Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 214A Announcer's Console

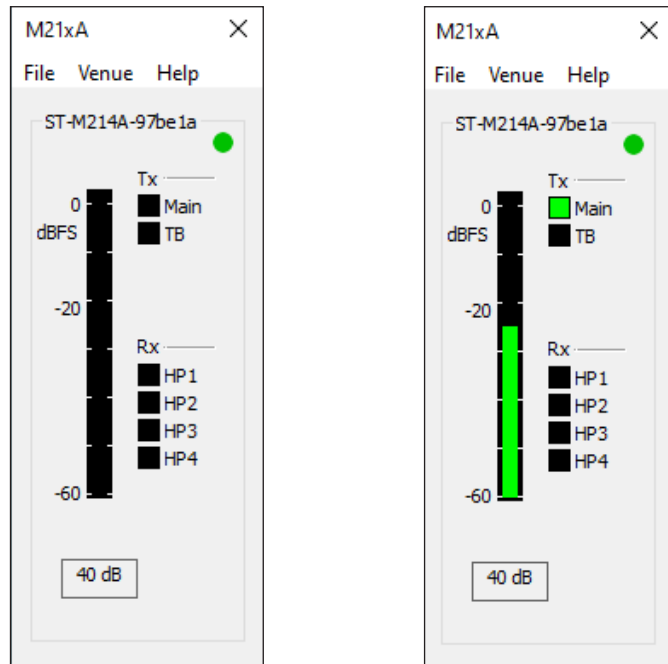


Model 214A Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 215A Announcer's Console

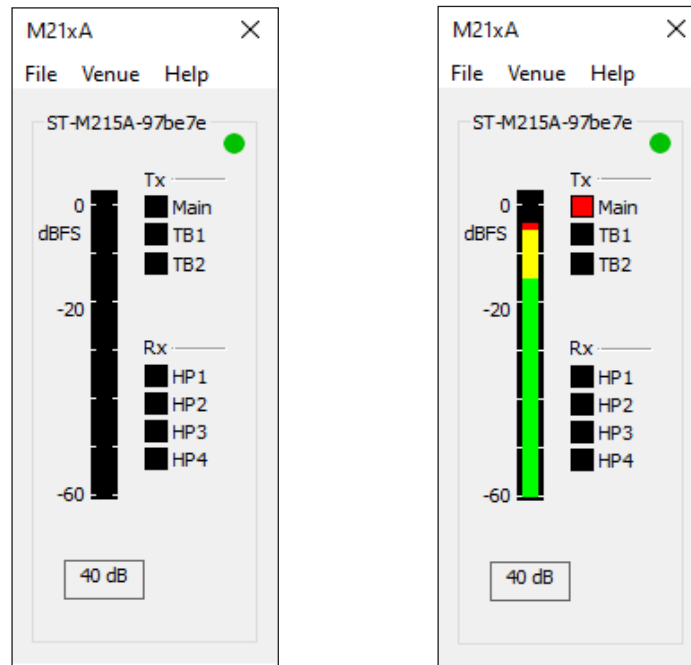

Model 215A Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 216A Announcer's Console

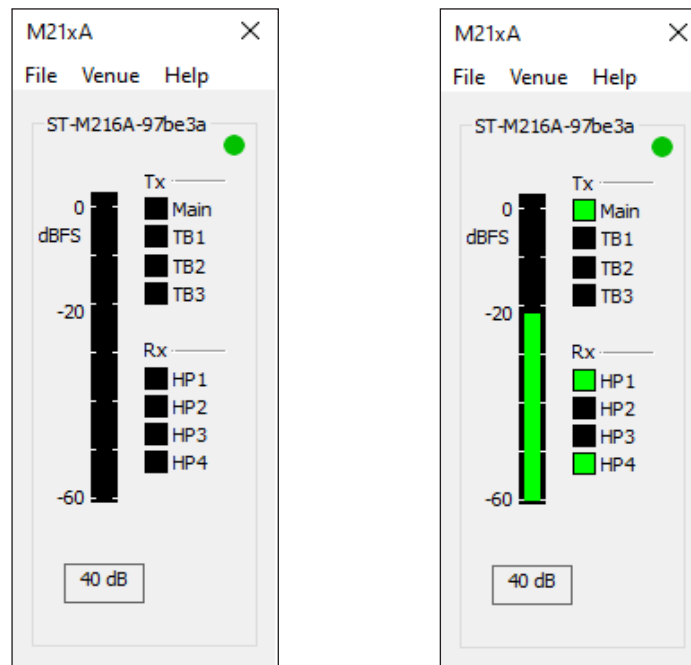


Model 216A Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 232 Announcer's Console



Model 232 Announcer's Console VenueView showing 'Active' (left) and 'Idle' (right) Screens

Model 234 Announcer's Console

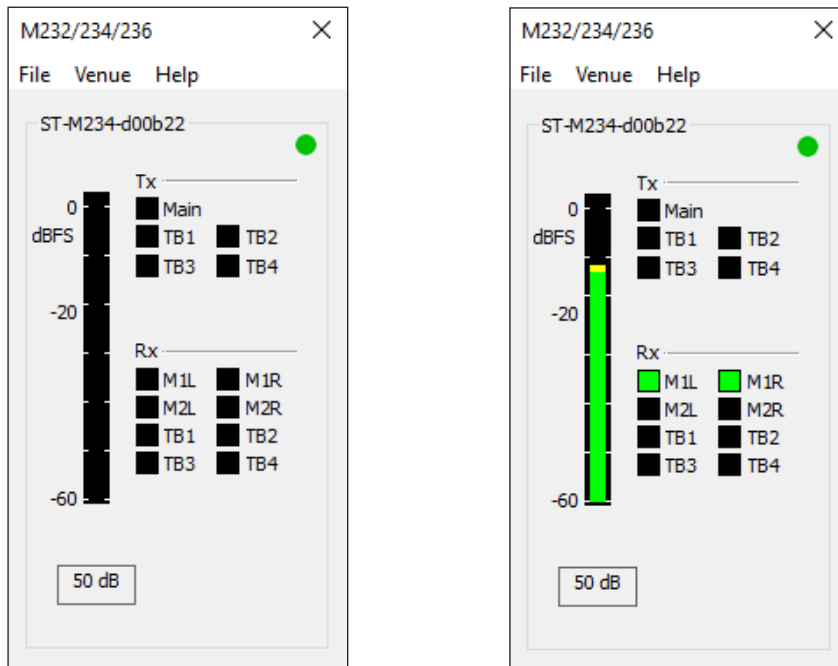


Model 234 Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 236 Announcer's Console




Model 236 Announcer's Console VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 381 On-Air Beltpack

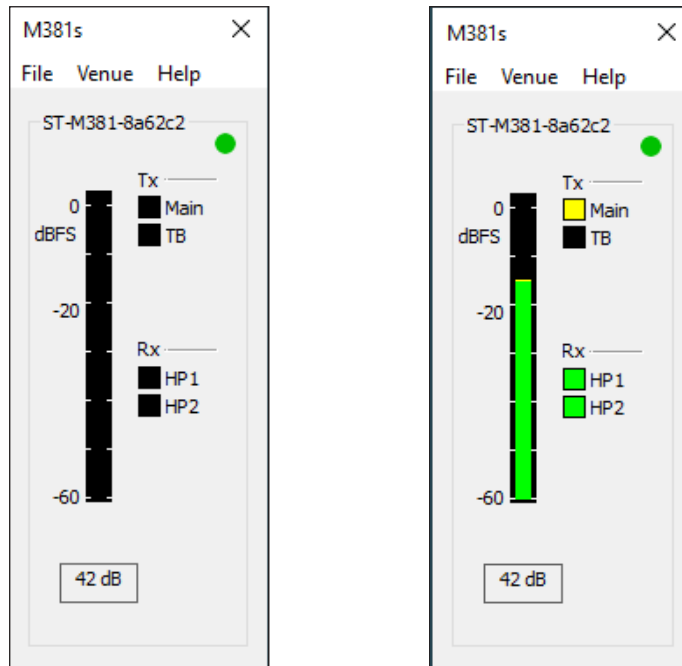

Model 381 On-Air Beltpack VenueView showing 'Active' (left) and 'Idle' (right) Screens

Model 385 Mic/Intercom Beltpack

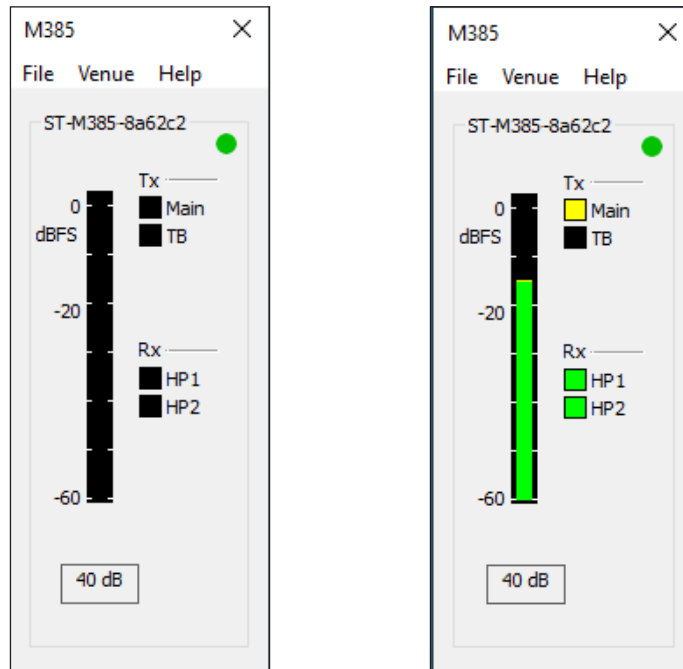


Model 385 Mic/Intercom Beltpack VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 5205 Mic/Line to Dante Interface




Model 5205 Mic/Line to Dante Interface VenueView showing 'Active' (left) and 'Idle' (right) Screens

Model 5206 Measurement Microphone Interface

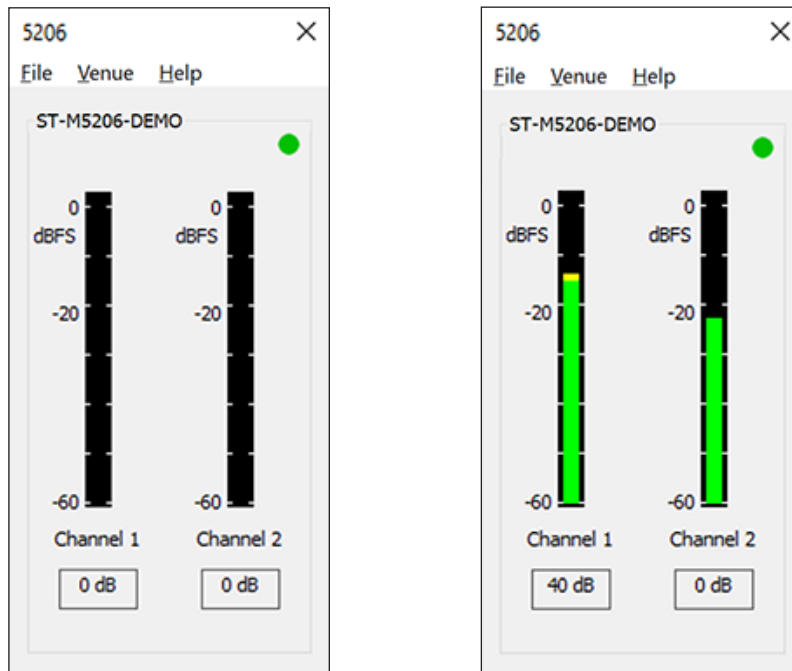

Model 5206 Measurement Microphone Interface VenueView showing 'Idle' (left) and 'Active' (right) Screens

Model 5418 Mic/Line Interface

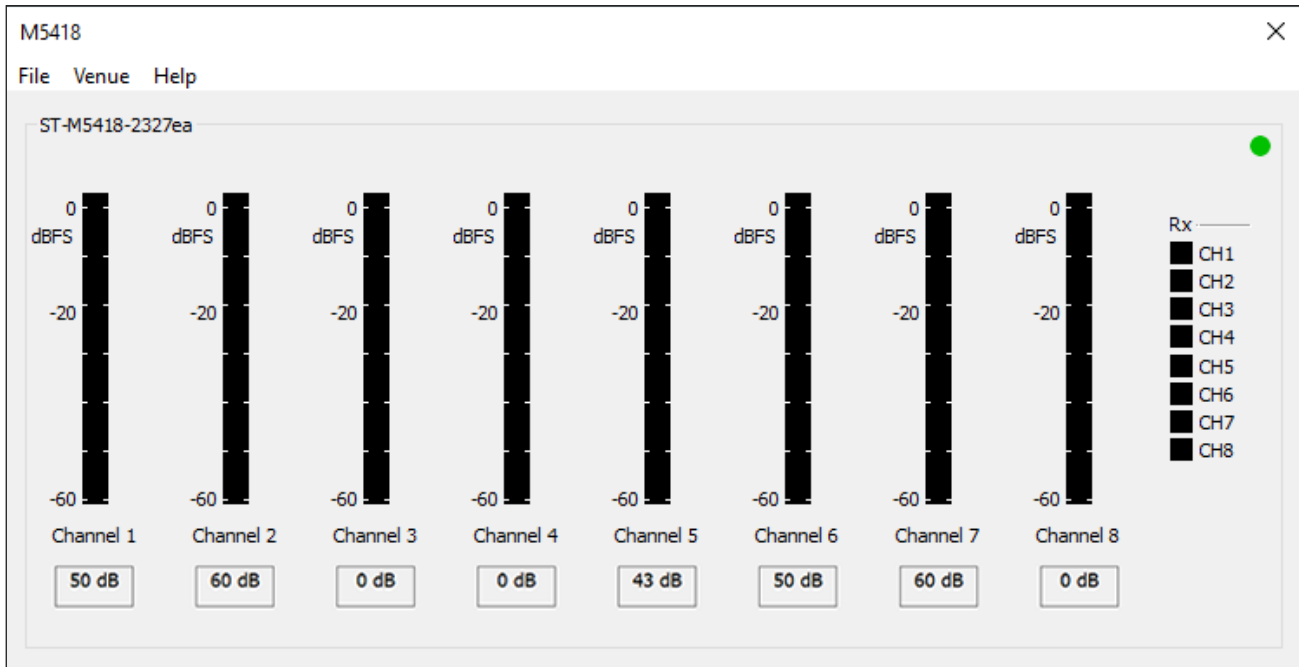

Model 5418 Mic/Line Interface VenueView showing 'Idle' Screen



Model 5418 Mic/Line Interface VenueView showing 'Active' Screen