
STUDIO TECHNOLOGIES, INC. MODEL 5100-SERIES DOUBLE-WIDTH FRONT PANEL AND PRINTED CIRCUIT BOARD DIMENSIONS (DIMENSIONS SHOWN IN INCHES) (AS OF AUGUST 2012, APPLIES TO MODEL 5140)

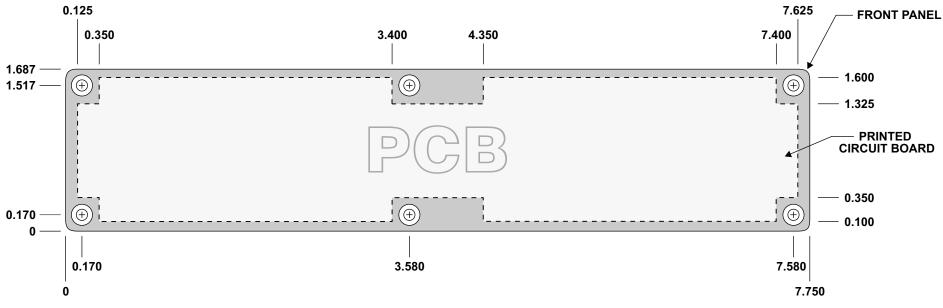

NOTES:

1) OPENING MUST BE MADE IN CUSTOM-MOUNTING ARRANGEMENT SO THAT PCB IS ALLOWED TO FREELY PASS THROUGH.

2) FRONT-PANEL MOUNTING LOCATIONS DIMENSIONED FOR #4 COUNTERSUNK SCREWS (6 PLACES). UNDERCUT FLAT-HEAD MACHINE SCREWS RECOMMENDED.

3) RECOMMENDED MOUNTING-HOLE LOCATIONS SHOULD BE DRILLED AND TAPPED FOR 4-40 SCREW THREADS (6 PLACES).

WARNING: THIS DRAWING SHOWS THE DIMENSIONS OF THE PRINTED CIRCUIT BOARD. PANEL OPENING MUST BE MADE LARGER TO ALLOW PCB TO PASS THROUGH! CONTACT FACTORY IF YOU HAVE QUESTIONS.