


**STUDIO TECHNOLOGIES, INC.**  
**MODEL 5100-SERIES SINGLE-WIDTH FRONT PANEL,**  
**PRINTED CIRCUIT BOARD, AND RECOMMENDED CUTOUT DIMENSIONS**  
**(DIMENSIONS SHOWN IN INCHES)**

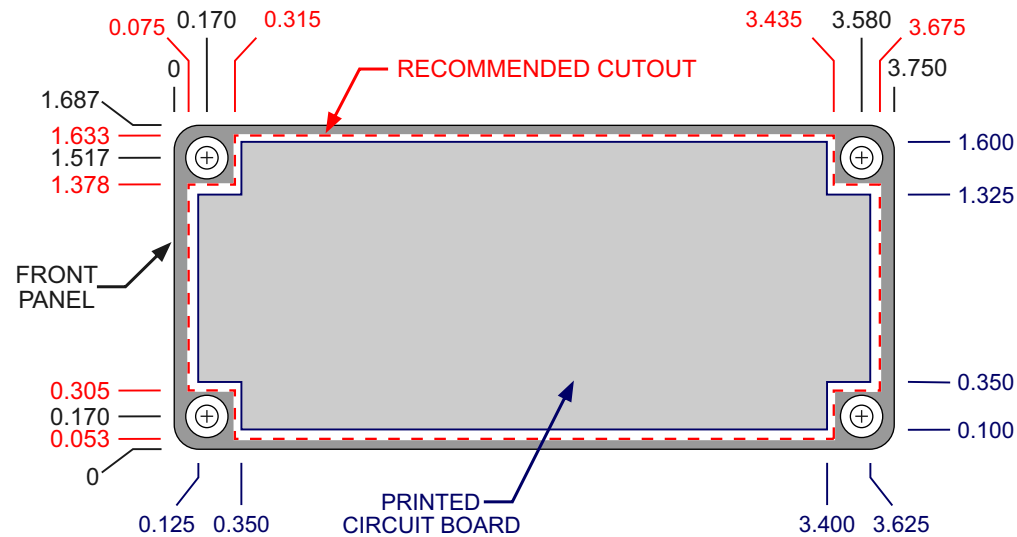

**NOTES:**

- 1) OPENING MUST BE MADE IN CUSTOM-MOUNTING ARRANGEMENT SO THAT PCB IS ALLOWED TO FREELY PASS THROUGH.
- 2) FRONT-PANEL MOUNTING LOCATIONS DIMENSIONED FOR #4 COUNTERSUNK SCREWS (4 PLACES). UNDERCUT FLAT-HEAD MACHINE SCREWS RECOMMENDED.
- 3) RECOMMENDED MOUNTING-HOLE LOCATIONS SHOULD BE DRILLED AND TAPPED FOR 4-40 SCREW THREADS (4 PLACES).

**WARNING:**  
**THIS DRAWING SHOWS THE DIMENSIONS OF THE PRINTED CIRCUIT BOARD.**  
**PANEL OPENING MUST BE MADE LARGER TO ALLOW PCB TO PASS THROUGH!**  
**CONTACT FACTORY IF YOU HAVE QUESTIONS.**